

REAR AIR CONDITIONER (RHD)

SYSTEM OUTLINE

The rear A/C OFF/AUTO/MANUAL (Mode), temperature can be selected at the A/C control panel (A/C control assembly) installed in the center cluster integration panel or the audio and rear A/C control SW in the rear center arm rest, which allows independent temperature control.
Also the air purifier function and exhaust damper system offers superb comfort.

SERVICE HINTS

A14 (A) A/C CONTROL ASSEMBLY

- (A) 3-GROUND : Approx. 12 volts with ignition SW at **ON** or **ACC** position
- (A) 9-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- (A)21-GROUND : Always approx. 12 volts
- (A) 1-GROUND : Always continuity

L13 (C) LUGGAGE ROOM J/B ECU

- 4-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- 5, 6-GROUND : Always approx. 12 volts
- 14, (C) 5-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page			
A14	A	130 (RHD)	J11	131 (RHD)	M2	132 (RHD)		
A15	B	130 (RHD)	J13	A	131 (RHD)	R4	A	133 (RHD)
A32		134 (RHD)	J14	B	131 (RHD)	R5	B	133 (RHD)
A38		139 (RHD)	J15	A	131 (RHD)	R9		136 (RHD)
C6		130 (RHD)	J16	B	131 (RHD)	S32	A	137 (RHD)
C12		130 (RHD)	J24		135 (RHD)	S33	B	137 (RHD)
G1		131 (RHD)	L13	C	135 (RHD)	S35		137 (RHD)

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
4	85 (RHD)	Fusible Link Block (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DF		
DI	101 (RHD)	Floor Wire and Driver Side J/B (Right Kick Panel)
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LB		
LC		
LE		
LF		
LL		
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PF		
PJ	107 (RHD)	Floor No.2 Wire and Passenger Side J/B (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID3	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IE2	156 (RHD)	Engine Room Main Wire and Floor No.2 Wire (Left Kick Panel)
IF2	156 (RHD)	Instrument Panel Wire and Floor Wire (Left Side of Shift Lever)
BE2	158 (RHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)
BH1	162 (RHD)	Rear Seat LH Wire and Floor No.2 Wire (Under the Rear Passenger's LH Seat)
B1	162 (RHD)	Rear Seat RH Wire and Floor Wire (Under the Rear Passenger's RH Seat)



: GROUND POINTS

Code	See Page	Ground Points Location
IG	154 (RHD)	Cowl Side Panel LH
IH	154 (RHD)	Left Side of Shift Lever
BM	158 (RHD)	Quarter Panel LH