

# RADIO AND PLAYER (LHD)

## SERVICE HINTS

### R4 (A) RADIO AND PLAYER

- (A) 11-GROUND : Approx. 12 volts with ignition SW at **ON** or **ACC** position  
 (A) 1-GROUND : Always approx. 12 volts  
 (A) 20-GROUND : Always continuity

### S33 (B), S34 (C) STEREO COMPONENT AMPLIFIER

- (B) 20-GROUND : Approx. 12 volts with ignition SW at **ON** or **ACC** position  
 (C) 7, (C) 16-GROUND : Always approx. 12 volts  
 (C) 12, (C) 13-GROUND : Always continuity

### S35 STEREO COMPONENT TUNER

- 1-GROUND : Always approx. 12 volts  
 14-GROUND : Approx. 12 volts with ignition SW at **ON** or **ACC** position  
 25-GROUND : Always continuity

## ○ : PARTS LOCATION

| Code | See Page    | Code | See Page    | Code | See Page    |
|------|-------------|------|-------------|------|-------------|
| A38  | 125 (LHD)   | J27  | 121 (LHD)   | S32  | A 123 (LHD) |
| C12  | 116 (LHD)   | J28  | A 121 (LHD) | S33  | B 123 (LHD) |
| F14  | 120 (LHD)   | J29  | B 121 (LHD) | S34  | C 123 (LHD) |
| F15  | 120 (LHD)   | J30  | 121 (LHD)   | S35  | 123 (LHD)   |
| G1   | 117 (LHD)   | M2   | 118 (LHD)   | T11  | 119 (LHD)   |
| J11  | 117 (LHD)   | N5   | A 122 (LHD) | T12  | 119 (LHD)   |
| J13  | 117 (LHD)   | N6   | B 122 (LHD) | T14  | B 123 (LHD) |
| J15  | A 117 (LHD) | R4   | A 119 (LHD) | T15  | C 123 (LHD) |
| J16  | B 117 (LHD) | R5   | B 119 (LHD) | T17  | 123 (LHD)   |
| J17  | A 117 (LHD) | R18  | 122 (LHD)   | T18  | 123 (LHD)   |
| J18  | B 117 (LHD) | R19  | 122 (LHD)   | W3   | 123 (LHD)   |
| J24  | 121 (LHD)   | S12  | 119 (LHD)   |      |             |

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

| Code | See Page | Junction Block and Wire Harness (Connector Location)            |
|------|----------|---|
| DE   | 87 (LHD) | Instrument Panel Wire and Driver Side J/B (Left Kick Panel)     |
| LE   | 110      | Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)        |
| LF   |          |   |
| PE   | 94 (LHD) | Instrument Panel Wire and Passenger Side J/B (Right Kick Panel) |
| PF   |          |   |
| PI   | 95 (LHD) | Floor Wire and Passenger Side J/B (Right Kick Panel)            |
| PJ   |          |   |

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

| Code | See Page  | Joining Wire Harness and Wire Harness (Connector Location)                 |
|------|-----------|--|
| IA1  | 142 (LHD) | Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)                   |
| IF1  | 144 (LHD) | Instrument Panel Wire and Floor Wire (Right Side of Shift Lever)           |
| IG1  | 144 (LHD) | Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)                  |
| IJ1  | 144 (LHD) | Front Door RH Wire and Floor Wire (Right Kick Panel)                       |
| BA1  | 146 (LHD) | Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)               |
| BB1  | 146 (LHD) | Rear Door No.1 Wire and Floor Wire (Right Center Pillar)                   |
| BC1  | 146 (LHD) | Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)             |
| BE1  | 146 (LHD) | Floor No.2 Wire and Floor Wire (Lower Back Panel RH)                       |
| BE2  |           |  |
| BH1  | 150 (LHD) | Rear Seat LH Wire and Floor No.2 Wire (Under the Rear Passenger's LH Seat) |
| BI1  | 150 (LHD) | Rear Seat RH Wire and Floor Wire (Under the Rear Passenger's RH Seat)      |

**: GROUND POINTS**

| Code | See Page  | Ground Points Location        |
|------|-----------|-------------------------------|
| IH   | 142 (LHD) | Right Side of Shift Lever     |
| IJ   | 142 (LHD) | Instrument Panel Brace RH     |
| IK   | 142 (LHD) | Cowl Side Panel RH            |
| BM   | 146 (LHD) | Quarter Panel LH              |
| BN   | 146 (LHD) | Rear Floor Partition Panel RH |
| BO   | 146 (LHD) | Quarter Panel RH              |
| BP   | 150 (LHD) | Rear Passenger LH Seat Back   |

**: SPLICE POINTS**

| Code | See Page  | Wire Harness with Splice Points | Code | See Page | Wire Harness with Splice Points |
|------|-----------|---------------------------------|------|----------|---------------------------------|
| B8   | 150 (LHD) | Rear Seat LH Wire               |      |          |                                 |