

RADIO AND PLAYER (RHD)

SERVICE HINTS

R4 (A) RADIO AND PLAYER

- (A) 11-GROUND : Approx. **12** volts with ignition SW at **ON** or **ACC** position
 (A) 1-GROUND : Always approx. **12** volts
 (A) 20-GROUND : Always continuity

S33 (B), S34 (C) STEREO COMPONENT AMPLIFIER

- (B) 20-GROUND : Approx. **12** volts with ignition SW at **ON** or **ACC** position
 (C) 7, (C) 16-GROUND : Always approx. **12** volts
 (C) 12, (C) 13-GROUND : Always continuity

S35 STEREO COMPONENT TUNER

- 1-GROUND : Always approx. **12** volts
 14-GROUND : Approx. **12** volts with ignition SW at **ON** or **ACC** position
 25-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A38	139 (RHD)	J27	135 (RHD)	S32	A 137 (RHD)
C12	130 (RHD)	J28	A 135 (RHD)	S33	B 137 (RHD)
F14	134 (RHD)	J29	B 135 (RHD)	S34	C 137 (RHD)
F15	134 (RHD)	J30	135 (RHD)	S35	137 (RHD)
G1	131 (RHD)	M2	132 (RHD)	T11	133 (RHD)
J11	131 (RHD)	N5	A 136 (RHD)	T12	133 (RHD)
J13	131 (RHD)	N6	B 136 (RHD)	T14	B 137 (RHD)
J15	A 131 (RHD)	R4	A 133 (RHD)	T15	C 137 (RHD)
J16	B 131 (RHD)	R5	B 133 (RHD)	T17	137 (RHD)
J17	A 131 (RHD)	R18	136 (RHD)	T18	137 (RHD)
J18	B 131 (RHD)	R19	136 (RHD)	W3	137 (RHD)
J24	135 (RHD)	S12	133 (RHD)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DI	101 (RHD)	Floor Wire and Driver Side J/B (Right Kick Panel)
DJ		
LE	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LF		
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PF		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	154 (RHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IF1	156 (RHD)	Instrument Panel Wire and Floor Wire (Left Side of Shift Lever)
IF2		
IG1	156 (RHD)	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
II1	156 (RHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)
BA1	158 (RHD)	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BB1	158 (RHD)	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BC1	158 (RHD)	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)
BE1	158 (RHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)
BE2		
BH1	162 (RHD)	Rear Seat LH Wire and Floor No.2 Wire (Under the Rear Passenger's LH Seat)
BI1	162 (RHD)	Rear Seat RH Wire and Floor Wire (Under the Rear Passenger's RH Seat)



: GROUND POINTS

Code	See Page	Ground Points Location
IG	154 (RHD)	Cowl Side Panel LH
II	154 (RHD)	Left Side of Shift Lever
IJ	154 (RHD)	Instrument Panel Brace LH
BM	158 (RHD)	Quarter Panel LH
BN	158 (RHD)	Rear Floor Partition Panel RH
BO	158 (RHD)	Quarter Panel RH
BP	162 (RHD)	Rear Passenger LH Seat Back



: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B10	162 (RHD)	Rear Seat LH Wire			