

# REAR FOG LIGHT (LHD)

## SERVICE HINTS

### C14 COMBINATION SW

- 1-GROUND : Always approx. 12 volts
- 2-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- 8-GROUND : Always continuity

### LUGGAGE ROOM J/B ECU

- 11, 13-GROUND : Always approx. 12 volts
- 14-GROUND : Always continuity

## ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C12	116 (LHD)	J14	117 (LHD)	J26	B 121 (LHD)
C14	116 (LHD)	J15	A 117 (LHD)	L11	A 121 (LHD)
D3	B 117 (LHD)	J16	B 117 (LHD)	L13	C 121 (LHD)
D4	C 117 (LHD)	J17	A 117 (LHD)	P7	118 (LHD)
G1	117 (LHD)	J18	B 117 (LHD)	R11	122 (LHD)
J11	117 (LHD)	J24	121 (LHD)	R13	122 (LHD)
J13	117 (LHD)	J25	A 121 (LHD)		

## ○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
4	84 (LHD)	Fusible Link Block (Engine Compartment Right)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DF		
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LI	110	Luggage Room Wire and Luggage Room J/B (Luggage Room Left)
LL	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PF		

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	142 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IE1	142 (LHD)	Engine Room Main Wire and Floor No.2 Wire (Left Kick Panel)

## ▽ : GROUND POINTS

Code	See Page	Ground Points Location
IG	142 (LHD)	Left Side of Instrument Panel
IH	142 (LHD)	Right Side of Shift Lever
IK	142 (LHD)	Cowl Side Panel RH
BM	146 (LHD)	Quarter Panel LH

