

SERVICE HINTS**C14 COMBINATION SW**

- 1-GROUND : Always approx. **12** volts
 2-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
 8-GROUND : Always continuity

LUGGAGE ROOM J/B ECU

- 11, 13-GROUND : Always approx. **12** volts
 14-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C12	130 (RHD)	J13	131 (RHD)	J26	B 135 (RHD)
C14	130 (RHD)	J14	131 (RHD)	L11	A 135 (RHD)
D3	B 131 (RHD)	J15	A 131 (RHD)	L13	C 135 (RHD)
D4	C 131 (RHD)	J16	B 131 (RHD)	P7	132 (RHD)
G1	131 (RHD)	J24	135 (RHD)	R11	136 (RHD)
J11	131 (RHD)	J25	A 135 (RHD)	R13	136 (RHD)

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
4	85 (RHD)	Fusible Link Block (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DF		
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LI	110	Luggage Room Wire and Luggage Room J/B (Luggage Room Left)
LL	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PF		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
ID3		
IE2	156 (RHD)	Engine Room Main Wire and Floor No.2 Wire (Left Kick Panel)
BE1	158 (RHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IG	154 (RHD)	Cowl Side Panel LH
II	154 (RHD)	Left Side of Shift Lever
IK	154 (RHD)	Right Side of Instrument Panel
BM	158 (RHD)	Quarter Panel LH