

**SERVICE HINTS****R23 REAR SUNSHADE CONTROL RELAY**

1-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position  
 5-GROUND : Always continuity

**○ : PARTS LOCATION**

Code	See Page	Code	See Page	Code	See Page
J24	121 (LHD)	R23	122 (LHD)	T7	119 (LHD)
P5	118 (LHD)	R29	125 (LHD)		

**○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LF		

**□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	142 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
BE1	146 (LHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)
BH1	150 (LHD)	Rear Seat LH Wire and Floor No.2 Wire (Under the Rear Passenger's LH Seat)

**▽ : GROUND POINTS**

Code	See Page	Ground Points Location
IK	142 (LHD)	Cowl Side Panel RH
BM	146 (LHD)	Quarter Panel LH
BP	150 (LHD)	Rear Passenger LH Seat Back

**○ : SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B8	150 (LHD)	Rear Seat LH Wire			