

SERVICE HINTS**R23 REAR SUNSHADE CONTROL RELAY**1-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

5-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J24	135 (RHD)	R23	136 (RHD)	T7	133 (RHD)
P5	132 (RHD)	R29	139 (RHD)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LF		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID2	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
BH1	162 (RHD)	Rear Seat LH Wire and Floor No.2 Wire (Under the Rear Passenger's LH Seat)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IG	154 (RHD)	Cowl Side Panel LH
BM	158 (RHD)	Quarter Panel LH
BP	162 (RHD)	Rear Passenger LH Seat Back

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B10	162 (RHD)	Rear Seat LH Wire			