

SERVICE HINTS**DEFOG RELAY**

- 1-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
 5-GROUND : Always approx. 12 volts
 4-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A14	116 (LHD)	N4	115 (LHD)	R25	B 122 (LHD)
J1	114 (LHD)	N7	122 (LHD)		
J27	121 (LHD)	R24	A 122 (LHD)		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	81	Engine Room No.1 R/B (Engine Compartment Left)
2	82	Engine Room No.2 R/B (Engine Compartment Left)
4	84 (LHD)	Fusible Link Block (Engine Compartment Right)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DC	88 (LHD)	Engine Room Main Wire and Driver Side J/B (Left Kick Panel)
DG	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB3	142 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH)
IE1	142 (LHD)	Engine Room Main Wire and Floor No.2 Wire (Left Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IG	142 (LHD)	Left Side of Instrument Panel
BN	146 (LHD)	Rear Floor Partition Panel RH

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E7	140 (LHD)	Engine Room Main Wire			