

SERVICE HINTS**DEFOG RELAY**

- 1-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
 5-GROUND : Always approx. 12 volts
 4-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A14	130 (RHD)	N4	129 (RHD)	R25	B 136 (RHD)
J1	128 (RHD)	N7	136 (RHD)		
J27	135 (RHD)	R24	A 136 (RHD)		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	81	Engine Room No.1 R/B (Engine Compartment Left)
2	82	Engine Room No.2 R/B (Engine Compartment Left)
4	85 (RHD)	Fusible Link Block (Engine Compartment Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	154 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH)
IE2	156 (RHD)	Engine Room Main Wire and Floor No.2 Wire (Left Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EC	152 (RHD)	Radiator Side Support LH
BN	158 (RHD)	Rear Floor Partition Panel RH

⬡ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E7	152 (RHD)	Engine Room Main Wire			