

SEAT BELT WARNING (RHD)

SYSTEM OUTLINE

1. SEAT BELT WARNING SYSTEM

When the ignition SW is ON and the driver's seat belt is not used, the warning light on the combination meter blinks and the buzzer sounds at the same time to warn the driver. As for the front passenger's seat, only when the built-in occupant detection sensor in the buckle SW RH detects that the front passenger is seated, the system warns the passenger by the warning light (w/o LEXUS navigation system) or the multi-display (w/ LEXUS navigation system).

SERVICE HINTS

C12 COMBINATION METER

- 1-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- 12, 13-GROUND : Always approx. **12** volts
- 11, 22-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A26	A	D2	A	J16	B
A27	B	D3	B	M1	A
B4	138 (RHD)	G1	131 (RHD)	M2	B
B5	138 (RHD)	J11	131 (RHD)	S13	133 (RHD)
C10	130 (RHD)	J13	131 (RHD)		
C12	130 (RHD)	J15	A		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
2	82	Engine Room No.2 R/B (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DF		
DH		
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PF		
PG		
PJ	107 (RHD)	Floor No.2 Wire and Passenger Side J/B (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC4	154 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH)
BG1	160 (RHD)	Floor Wire and Front Seat RH Wire (Under the Driver's Seat)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IG	154 (RHD)	Cowl Side Panel LH
IH	154 (RHD)	Left Side of Shift Lever
II		
IJ	154 (RHD)	Instrument Panel Brace LH
IR	154 (RHD)	Under the Driver's Seat

