

SERVICE HINTS

T7 SEAT HEATER SW LH, SEAT HEATER SW RH

14-GROUND : Approx. 12 volts with ignition SW at ON or ST position

6-GROUND : Always continuity

S40, S41 SEAT HEATER FRONT LH, RH

1-GROUND : Always approx. 12 volts

3-GROUND : Always continuity

○ : PARTS LOCATION

Code		See Page	Code	See Page	Code	See Page
J15	A	117 (LHD)	J22	121 (LHD)	S41	124 (LHD)
J16	B	117 (LHD)	S40	124 (LHD)	T7	119 (LHD)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DJ	89 (LHD)	Floor No.2 Wire and Driver Side J/B (Left Kick Panel)
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PJ	95 (LHD)	Floor Wire and Passenger Side J/B (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	142 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IG1	144 (LHD)	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
BF1	148 (LHD)	Floor No.2 Wire and Front Seat LH Wire (Under the Driver's Seat)
BG2	148 (LHD)	Floor Wire and Front Seat RH Wire (Under the Front Passenger's Seat)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IK	142 (LHD)	Cowl Side Panel RH
IR	142 (LHD)	Under the Front Passenger's Seat
BL	146 (LHD)	Rear Floor Partition Panel LH