

SERVICE HINTS**T7 SEAT HEATER SW LH, SEAT HEATER SW RH**14-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

6-GROUND : Always continuity

S40, S41 SEAT HEATER FRONT LH, RH

1-GROUND : Always approx. 12 volts

3-GROUND : Always continuity

 : **PARTS LOCATION**

Code		See Page	Code	See Page	Code	See Page
J15	A	131 (RHD)	J22	135 (RHD)	S41	138 (RHD)
J16	B	131 (RHD)	S40	138 (RHD)	T7	133 (RHD)

 : **JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
DJ	101 (RHD)	Floor Wire and Driver Side J/B (Right Kick Panel)
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PJ	107 (RHD)	Floor No.2 Wire and Passenger Side J/B (Left Kick Panel)

 : **CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID2	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IG2	156 (RHD)	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
BF1	160 (RHD)	Floor No.2 Wire and Front Seat LH Wire (Under the Front Passenger's Seat)
BG1	160 (RHD)	Floor Wire and Front Seat RH Wire (Under the Driver's Seat)

 : **GROUND POINTS**

Code	See Page	Ground Points Location
IG	154 (RHD)	Cowl Side Panel LH
IR	154 (RHD)	Under the Driver's Seat
BL	158 (RHD)	Rear Floor Partition Panel LH