

SERVICE HINTS**A38 SEAT HEATER SW (REAR) [AUDIO AND REAR A/C CONTROL SW]**1, 11-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

7-GROUND : Always continuity

T7 SEAT HEATER SW LH, SEAT HEATER SW RH14-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

6-GROUND : Always continuity

 : **PARTS LOCATION**

Code	See Page	Code	See Page	Code	See Page
A38	125 (LHD)	J27	121 (LHD)	T7	119 (LHD)
J15	A 117 (LHD)	S44	125 (LHD)		
J16	B 117 (LHD)	S45	125 (LHD)		

 : **JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
LC	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)

 : **CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	142 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
BE1	146 (LHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)
B11	150 (LHD)	Rear Seat RH Wire and Floor Wire (Under the Rear Passenger's RH Seat)

 : **GROUND POINTS**

Code	See Page	Ground Points Location
IK	142 (LHD)	Cowl Side Panel RH
BN	146 (LHD)	Rear Floor Partition Panel RH

 : **SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B11	150 (LHD)	Rear Seat RH Wire			