

SERVICE HINTS**A38 SEAT HEATER SW (REAR) [AUDIO AND REAR A/C CONTROL SW]**1, 11-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

7-GROUND : Always continuity

T7 SEAT HEATER SW LH, SEAT HEATER SW RH14-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

6-GROUND : Always continuity

 : **PARTS LOCATION**

Code	See Page	Code	See Page	Code	See Page
A38	139 (RHD)	J27	135 (RHD)	T7	133 (RHD)
J15	A 131 (RHD)	S44	139 (RHD)		
J16	B 131 (RHD)	S45	139 (RHD)		

 : **JUNCTION BLOCK AND WIRE HARNESS CONNECTOR**

Code	See Page	Junction Block and Wire Harness (Connector Location)
LC	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)

 : **CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID2	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
BC1	158 (RHD)	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)
B11	162 (RHD)	Rear Seat RH Wire and Floor Wire (Under the Rear Passenger's RH Seat)

 : **GROUND POINTS**

Code	See Page	Ground Points Location
IG	154 (RHD)	Cowl Side Panel LH
BN	158 (RHD)	Rear Floor Partition Panel RH

 : **SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B13	162 (RHD)	Rear Seat RH Wire			