

SERVICE HINTS

R29 SEAT HEATER SW (REAR) [REAR SEAT CONTROL SW]

- 1, 11-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
 7-GROUND : Always continuity

T7 SEAT HEATER SW LH, SEAT HEATER SW RH

- 14-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
 6-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page	
J15	A	117 (LHD)	J27	121 (LHD)	S45	125 (LHD)
J16	B	117 (LHD)	R29	125 (LHD)	T7	119 (LHD)
J24		121 (LHD)	S44	125 (LHD)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
LC	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	142 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
BE1	146 (LHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)
BH1	150 (LHD)	Rear Seat LH Wire and Floor No.2 Wire (Under the Rear Passenger's LH Seat)
BI1	150 (LHD)	Rear Seat RH Wire and Floor Wire (Under the Rear Passenger's RH Seat)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IK	142 (LHD)	Cowl Side Panel RH
BM	146 (LHD)	Quarter Panel LH
BN	146 (LHD)	Rear Floor Partition Panel RH
BP	150 (LHD)	Rear Passenger LH Seat Back
BQ	150 (LHD)	Rear Passenger RH Seat Back

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B8	150 (LHD)	Rear Seat LH Wire	B10	150 (LHD)	Rear Seat RH Wire
B9					