

**SERVICE HINTS**

**R29 SEAT HEATER SW (REAR) [REAR SEAT CONTROL SW]**

1, 11-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position  
 7-GROUND : Always continuity

**T7 SEAT HEATER SW LH, SEAT HEATER SW RH**

14-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position  
 6-GROUND : Always continuity

 : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page	
J15	A	131 (RHD)	J27	135 (RHD)	S45	139 (RHD)
J16	B	131 (RHD)	R29	139 (RHD)	T7	133 (RHD)
J24		135 (RHD)	S44	139 (RHD)		

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
LC	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID2	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
BE1	158 (RHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)
BH1	162 (RHD)	Rear Seat LH Wire and Floor No.2 Wire (Under the Rear Passenger's LH Seat)
BI1	162 (RHD)	Rear Seat RH Wire and Floor Wire (Under the Rear Passenger's RH Seat)

 : GROUND POINTS

Code	See Page	Ground Points Location
IG	154 (RHD)	Cowl Side Panel LH
BM	158 (RHD)	Quarter Panel LH
BN	158 (RHD)	Rear Floor Partition Panel RH
BP	162 (RHD)	Rear Passenger LH Seat Back
BQ	162 (RHD)	Rear Passenger RH Seat Back

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B10	162 (RHD)	Rear Seat LH Wire	B12	162 (RHD)	Rear Seat RH Wire
B11					