

STARTING AND IGNITION (LHD)

SERVICE HINTS

I17 IGNITION SW

5-4 : Closed with ignition key at **ST** position

S4 (A) STARTER

(A) 1-GROUND : Always approx. 12 volts

○ : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
E4	B	112 (LHD)	I5	114 (LHD)	N1	115 (LHD)		
E5	C	112 (LHD)	I6	114 (LHD)	N2	115 (LHD)		
E6	D	112 (LHD)	I7	114 (LHD)	N3	115 (LHD)		
I1	114 (LHD)		I8	114 (LHD)	S4	A	115 (LHD)	
I2	114 (LHD)		I17	117 (LHD)	S5	B	115 (LHD)	
I3	114 (LHD)		J5	A	114 (LHD)			
I4	114 (LHD)		J6	B	114 (LHD)			

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	81	Engine Room No.1 R/B (Engine Compartment Left)
4	84 (LHD)	Fusible Link Block (Engine Compartment Right)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
4A	84 (LHD)	Engine Room Main Wire and Fusible Link Block (Engine Compartment Right)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB2	140 (LHD)	Engine Wire and Engine Room Main Wire (Inside of ECU Box)
EC1	140 (LHD)	Engine No.2 Wire and Engine Wire (Behind the Intake Manifold)
IB2	142 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH)
IH3	144 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EE	140 (LHD)	RH Side of Cylinder Head
EF	140 (LHD)	LH Side of Cylinder Head

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	140 (LHD)	Engine Room Main Wire	E12	140 (LHD)	Engine Wire
E10			E13		
E11	140 (LHD)	Engine Wire			

