

# STARTING AND IGNITION (RHD)

## SERVICE HINTS

### I17 IGNITION SW

5-4 : Closed with ignition key at **ST** position

### S4 (A) STARTER

(A) 1-GROUND : Always approx. 12 volts

## ○ : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
E4	B	126 (RHD)	I5	128 (RHD)	N1	129 (RHD)		
E5	C	126 (RHD)	I6	128 (RHD)	N2	129 (RHD)		
E6	D	126 (RHD)	I7	128 (RHD)	N3	129 (RHD)		
I1	128 (RHD)		I8	128 (RHD)	S4	A	129 (RHD)	
I2	128 (RHD)		I17	131 (RHD)	S5	B	129 (RHD)	
I3	128 (RHD)		J5	A	128 (RHD)			
I4	128 (RHD)		J6	B	128 (RHD)			

## ○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	81	Engine Room No.1 R/B (Engine Compartment Left)
4	85 (RHD)	Fusible Link Block (Engine Compartment Left)

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
4A	85 (RHD)	Engine Room Main Wire and Fusible Link Block (Engine Compartment Left)

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	152 (RHD)	Engine Wire and Engine Room Main Wire (Inside of ECU Box)
EB2		
EC1	152 (RHD)	Engine No.2 Wire and Engine Wire (Behind the Intake Manifold)
IC2	154 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH)
IH2	156 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)

## ▽ : GROUND POINTS

Code	See Page	Ground Points Location
EE	152 (RHD)	RH Side of Cylinder Head
EF	152 (RHD)	LH Side of Cylinder Head

## ○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	152 (RHD)	Engine Room Main Wire	E12	152 (RHD)	Engine Wire
E10	152 (RHD)	Engine Wire	E13	152 (RHD)	Engine Room Main Wire
E11					

