

STOP LIGHT (LHD)

SYSTEM OUTLINE

The current always applied from the STOP fuse into TERMINAL 2 of the stop light SW. If the brake pedal is depressed, the stop lights light up.

STOP LIGHT DISCONNECTION WARNING

If any stop light wiring is faulty when the brake pedal is depressed with the ignition SW set at ON, the light failure sensor detects a voltage difference and is activated to turn on the rear lights warning light in the combination meter to warn the driver. The warning light is remained lit until the ignition SW is turned to the OFF position.

SERVICE HINTS

LUGGAGE ROOM J/B ECU

11, 13-GROUND : Always approx. 12 volts
14-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C12	116 (LHD)	J13	117 (LHD)	L13 C	121 (LHD)
C14	116 (LHD)	J17 A	117 (LHD)	P7	118 (LHD)
D2 A	117 (LHD)	J18 B	117 (LHD)	R10	122 (LHD)
D3 B	117 (LHD)	J24	121 (LHD)	R11	122 (LHD)
D4 C	117 (LHD)	J25 A	121 (LHD)	R12	122 (LHD)
G1	117 (LHD)	J26 B	121 (LHD)	R13	122 (LHD)
H23	121 (LHD)	L11 A	121 (LHD)	S21	119 (LHD)
J11	117 (LHD)	L12 B	121 (LHD)		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
4	84 (LHD)	Fusible Link Block (Engine Compartment Right)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DC	88 (LHD)	Engine Room Main Wire and Driver Side J/B (Left Kick Panel)
DE	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LI	110	Luggage Room Wire and Luggage Room J/B (Luggage Room Left)
LL	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
PE PF	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	142 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IE1	142 (LHD)	Engine Room Main Wire and Floor No.2 Wire (Left Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IK	142 (LHD)	Cowl Side Panel RH
BM	146 (LHD)	Quarter Panel LH

