

SYSTEM OUTLINE

The current always applied from the STOP fuse into TERMINAL 2 of the stop light SW. If the brake pedal is depressed, the stop lights light up.

STOP LIGHT DISCONNECTION WARNING

If any stop light wiring is faulty when the brake pedal is depressed with the ignition SW set at ON, the light failure sensor detects a voltage difference and is activated to turn on the rear lights warning light in the combination meter to warn the driver. The warning light is remained lit until the ignition SW is turned to the OFF position.

SERVICE HINTS

LUGGAGE ROOM J/B ECU

11, 13-GROUND : Always approx. 12 volts
14-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C12	130 (RHD)	J11	131 (RHD)	L13 C	135 (RHD)
C14	130 (RHD)	J13	131 (RHD)	P7	132 (RHD)
D2 A	131 (RHD)	J24	135 (RHD)	R10	136 (RHD)
D3 B	131 (RHD)	J25 A	135 (RHD)	R11	136 (RHD)
D4 C	131 (RHD)	J26 B	135 (RHD)	R12	136 (RHD)
G1	131 (RHD)	L11 A	135 (RHD)	R13	136 (RHD)
H23	135 (RHD)	L12 B	135 (RHD)	S21	133 (RHD)

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
4	85 (RHD)	Fusible Link Block (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DC	99 (RHD)	Engine Room Main Wire and Driver Side J/B (Right Kick Panel)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LI	110	Luggage Room Wire and Luggage Room J/B (Luggage Room Left)
LL	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
PE PF	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1 ID3	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IE2	156 (RHD)	Engine Room Main Wire and Floor No.2 Wire (Left Kick Panel)
BE1	158 (RHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IG	154 (RHD)	Cowl Side Panel LH
II	154 (RHD)	Left Side of Shift Lever
BM	158 (RHD)	Quarter Panel LH