

SERVICE HINTS

D25 (B) DRIVER DOOR ECU

- (B) 5-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- (B) 4, (B) 6-GROUND : Always approx. **12** volts
- (B) 1-GROUND : Always continuity

F17 (B) FRONT PASSENGER DOOR ECU

- (B) 5-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- (B) 4, (B) 6-GROUND : Always approx. **12** volts
- (B) 1-GROUND : Always continuity

R15 REAR DOOR LH ECU

- 26-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- 1, 2-GROUND : Always approx. **12** volts
- 6-GROUND : Always continuity

R16 REAR DOOR RH ECU

- 26-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- 1, 2-GROUND : Always approx. **12** volts
- 6, 15-GROUND : Always continuity

T5 THEFT DETERRENT ECU

- 24-GROUND : Approx. **12** volts with ignition SW at **ON** or **ST** position
- 31-GROUND : Approx. **12** volts with ignition SW at **ON** or **ACC** position
- 1, 21-GROUND : Always approx. **12** volts
- 20-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
D2	A	J7	114 (LHD)	L6	121 (LHD)
D3	B	J11	A	L11	A
D12	120 (LHD)	J12	B	L13	C
D13	120 (LHD)	J13	A	O6	122 (LHD)
D14	120 (LHD)	J14	B	P13	122 (LHD)
D15	120 (LHD)	J15	A	R6	119 (LHD)
D18	120 (LHD)	J16	B	R15	122 (LHD)
D24	A	J22	121 (LHD)	R16	122 (LHD)
D25	B	J24	121 (LHD)	T1	115 (LHD)
E8	112 (LHD)	J25	121 (LHD)	T5	119 (LHD)
F16	A	J27	121 (LHD)	T9	119 (LHD)
F17	B	J30	121 (LHD)	T16	123 (LHD)
G1	117 (LHD)	K1	114 (LHD)	U7	119 (LHD)
I19	121 (LHD)	K4	118 (LHD)		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	81	Engine Room No.1 R/B (Engine Compartment Left)
2	82	Engine Room No.2 R/B (Engine Compartment Left)

THEFT DETERRENT (LHD w/o SMART KEY SYSTEM)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	81	Engine Room Main Wire and Engine Room No.1 J/B (Engine Compartment Left)
4A	84 (LHD)	Engine Room Main Wire and Fusible Link Block (Engine Compartment Right)
4B		
DE	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DF		
DG		
DI	89 (LHD)	Floor No.2 Wire and Driver Side J/B (Left Kick Panel)
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LC		
LE		
LI	110	Luggage Room Wire and Luggage Room J/B (Luggage Room Left)
PC	93 (LHD)	Engine Room Main Wire and Passenger Side J/B (Right Kick Panel)
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PF		
PG		
PI	95 (LHD)	Floor Wire and Passenger Side J/B (Right Kick Panel)
PJ		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	142 (LHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IC1	142 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IC3		
IH2	144 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)
II1	144 (LHD)	Instrument Panel Wire and Roof Wire (Cowl Side Panel RH)
II2		
IJ1	144 (LHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)
BA1	146 (LHD)	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BA2		
BB1	146 (LHD)	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BB2		
BC1	146 (LHD)	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)

: GROUND POINTS

Code	See Page	Ground Points Location
EC	140 (LHD)	Radiator Side Support LH
IH	142 (LHD)	Right Side of Shift Lever
II		
BL	146 (LHD)	Rear Floor Partition Panel LH
BM	146 (LHD)	Quarter Panel LH
BN	146 (LHD)	Rear Floor Partition Panel RH
BO	146 (LHD)	Quarter Panel RH

: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I6	144 (LHD)	Instrument Panel Wire	B1	146 (LHD)	Roof Wire

