

THEFT DETERRENT (RHD w/o SMART KEY SYSTEM)

SERVICE HINTS

D25 (B) DRIVER DOOR ECU

- (B) 5-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- (B) 4, (B) 6-GROUND : Always approx. 12 volts
- (B) 1-GROUND : Always continuity

F17 (B) FRONT PASSENGER DOOR ECU

- (B) 5-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- (B) 4, (B) 6-GROUND : Always approx. 12 volts
- (B) 1-GROUND : Always continuity

R15 REAR DOOR LH ECU

- 26-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- 1, 2-GROUND : Always approx. 12 volts
- 6-GROUND : Always continuity

R16 REAR DOOR RH ECU

- 26-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- 1, 2-GROUND : Always approx. 12 volts
- 6, 15-GROUND : Always continuity

T5 THEFT DETERRENT ECU

- 24-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position
- 31-GROUND : Approx. 12 volts with ignition SW at **ON** or **ACC** position
- 1, 21-GROUND : Always approx. 12 volts
- 20-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page			
D2	A	131 (RHD)	J7	128 (RHD)	K4	132 (RHD)		
D3	B	131 (RHD)	J8	128 (RHD)	L6	135 (RHD)		
D12		134 (RHD)	J11	A	131 (RHD)	L11	A	135 (RHD)
D13		134 (RHD)	J12	B	131 (RHD)	L13	C	135 (RHD)
D14		134 (RHD)	J13	A	131 (RHD)	O6		136 (RHD)
D15		134 (RHD)	J14	B	131 (RHD)	P13		136 (RHD)
D17		134 (RHD)	J15	A	131 (RHD)	R6		133 (RHD)
D24	A	134 (RHD)	J16	B	131 (RHD)	R15		136 (RHD)
D25	B	134 (RHD)	J22		135 (RHD)	R16		136 (RHD)
E8		126 (RHD)	J24		135 (RHD)	T1		129 (RHD)
F16	A	134 (RHD)	J25		135 (RHD)	T5		133 (RHD)
F17	B	134 (RHD)	J27		135 (RHD)	T9		133 (RHD)
G1		131 (RHD)	J30		135 (RHD)	T16		137 (RHD)
I19		135 (RHD)	K1		128 (RHD)	U7		133 (RHD)

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	81	Engine Room No.1 R/B (Engine Compartment Left)
2	82	Engine Room No.2 R/B (Engine Compartment Left)

 : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	81	Engine Room Main Wire and Engine Room No.1 J/B (Engine Compartment Left)
4A	85 (RHD)	Engine Room Main Wire and Fusible Link Block (Engine Compartment Left)
4B		
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DF		
DG		
DI	101 (RHD)	Floor Wire and Driver Side J/B (Right Kick Panel)
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LC		
LE		
LI	110	Luggage Room Wire and Luggage Room J/B (Luggage Room Left)
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PF		
PG		
PI	107 (RHD)	Floor No.2 Wire and Passenger Side J/B (Left Kick Panel)
PJ		

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	154 (RHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IB1	154 (RHD)	Instrument Panel Wire and Roof Wire (Cowl Side Panel LH)
IB2		
IC4	154 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH)
ID3	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IG2	156 (RHD)	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
IH3	156 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)
II1	156 (RHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)
BA1	158 (RHD)	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BA2		
BB1	158 (RHD)	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BB2		
BC1	158 (RHD)	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)
BE1	158 (RHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)

 : GROUND POINTS

Code	See Page	Ground Points Location
ED	152 (RHD)	Under the Fusible Link Block
IH	154 (RHD)	Left Side of Shift Lever
II		
BL	158 (RHD)	Rear Floor Partition Panel LH
BM	158 (RHD)	Quarter Panel LH
BN	158 (RHD)	Rear Floor Partition Panel RH
BO	158 (RHD)	Quarter Panel RH

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I2	156 (RHD)	Instrument Panel Wire			