

TAILLIGHT (LHD)

SYSTEM OUTLINE

When the light control SW is turned to the TAIL or HEAD, the signal from the combination SW is sent to the front controller or luggage room J/B ECU by the multiplex communication, and the parking light or taillight come on.

TAILLIGHT DISCONNECTION WARNING

If any taillight wiring is faulty when the ignition SW is turned to the ON position with the light control SW set at TAIL or HEAD, the luggage room J/B ECU detects a voltage difference and is activated to turn on the rear lights warning light in the combination meter to warn the driver.

SERVICE HINTS

FRONT CONTROLLER

9-GROUND : Always approx. 12 volts

C14 COMBINATION SW

1-GROUND : Always approx. 12 volts

2-GROUND : Approx. 12 volts with ignition SW at ON or ST position

8-GROUND : Always continuity

LUGGAGE ROOM J/B ECU

10, 15-GROUND : Always approx. 12 volts

14-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C12	116 (LHD)	J14	117 (LHD)	L11	A 121 (LHD)
C14	116 (LHD)	J15	A 117 (LHD)	L12	B 121 (LHD)
D2	A 117 (LHD)	J16	B 117 (LHD)	L13	C 121 (LHD)
D3	B 117 (LHD)	J17	A 117 (LHD)	P7	118 (LHD)
D4	C 117 (LHD)	J18	B 117 (LHD)	R10	122 (LHD)
F1	113 (LHD)	J24	121 (LHD)	R11	122 (LHD)
F2	113 (LHD)	J25	A 121 (LHD)	R12	122 (LHD)
G1	117 (LHD)	J26	B 121 (LHD)	R13	122 (LHD)
J11	117 (LHD)	L2	121 (LHD)		
J13	117 (LHD)	L3	121 (LHD)		

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	81	Engine Room No.1 R/B (Engine Compartment Left)
2	82	Engine Room No.2 R/B (Engine Compartment Left)
4	84 (LHD)	Fusible Link Block (Engine Compartment Right)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DF		
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LI	110	Luggage Room Wire and Luggage Room J/B (Luggage Room Left)
LJ		
LL	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PF		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	142 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
IE1	142 (LHD)	Engine Room Main Wire and Floor No.2 Wire (Left Kick Panel)

**: GROUND POINTS**

Code	See Page	Ground Points Location
EA	140 (LHD)	Radiator Side Support RH
EC	140 (LHD)	Radiator Side Support LH
IG	142 (LHD)	Left Side of Instrument Panel
IH	142 (LHD)	Right Side of Shift Lever
IK	142 (LHD)	Cowl Side Panel RH
BM	146 (LHD)	Quarter Panel LH