

TAILLIGHT (RHD)

SYSTEM OUTLINE

When the light control SW is turned to the TAIL or HEAD, the signal from the combination SW is sent to the front controller or luggage room J/B ECU by the multiplex communication, and the parking light or taillight come on.

TAILLIGHT DISCONNECTION WARNING

If any taillight wiring is faulty when the ignition SW is turned to the ON position with the light control SW set at TAIL or HEAD, the luggage room J/B ECU detects a voltage difference and is activated to turn on the rear lights warning light in the combination meter to warn the driver.

SERVICE HINTS

FRONT CONTROLLER

9-GROUND : Always approx. 12 volts

C14 COMBINATION SW

1-GROUND : Always approx. 12 volts

2-GROUND : Approx. 12 volts with ignition SW at ON or ST position

8-GROUND : Always continuity

LUGGAGE ROOM J/B ECU

10, 15-GROUND : Always approx. 12 volts

14-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C12	130 (RHD)	J11	131 (RHD)	L3	135 (RHD)
C14	130 (RHD)	J13	131 (RHD)	L11	A 135 (RHD)
D2	A 131 (RHD)	J14	131 (RHD)	L12	B 135 (RHD)
D3	B 131 (RHD)	J15	A 131 (RHD)	L13	C 135 (RHD)
D4	C 131 (RHD)	J16	B 131 (RHD)	P7	132 (RHD)
F1	127 (RHD)	J24	135 (RHD)	R10	136 (RHD)
F2	127 (RHD)	J25	A 135 (RHD)	R11	136 (RHD)
G1	131 (RHD)	J26	B 135 (RHD)	R12	136 (RHD)
J8	128 (RHD)	L2	135 (RHD)	R13	136 (RHD)

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	81	Engine Room No.1 R/B (Engine Compartment Left)
2	82	Engine Room No.2 R/B (Engine Compartment Left)
4	85 (RHD)	Fusible Link Block (Engine Compartment Left)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DF		
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
LI	110	Luggage Room Wire and Luggage Room J/B (Luggage Room Left)
LJ		
LL	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PF		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
ID3		
IE2	156 (RHD)	Engine Room Main Wire and Floor No.2 Wire (Left Kick Panel)
BE1	158 (RHD)	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)



: GROUND POINTS

Code	See Page	Ground Points Location
EA	152 (RHD)	Radiator Side Support RH
EC	152 (RHD)	Radiator Side Support LH
IG	154 (RHD)	Cowl Side Panel LH
II	154 (RHD)	Left Side of Shift Lever
IK	154 (RHD)	Right Side of Instrument Panel
BM	158 (RHD)	Quarter Panel LH