

# TURN SIGNAL AND HAZARD WARNING LIGHT (LHD)

## SERVICE HINTS

### DRIVER SIDE J/B ECU

2-GROUND : Always approx. 12 volts

### C14 COMBINATION SW

1-GROUND : Always approx. 12 volts

2-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

8-GROUND : Always continuity

## ○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C12	116 (LHD)	F9	113 (LHD)	J24	121 (LHD)
C14	116 (LHD)	H17	A 117 (LHD)	P7	118 (LHD)
D4	C 117 (LHD)		B 117 (LHD)	R10	122 (LHD)
F6	113 (LHD)	J14	117 (LHD)	R12	122 (LHD)
F7	113 (LHD)	J15	A 117 (LHD)		
F8	113 (LHD)	J16	B 117 (LHD)		

## ○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DD	88 (LHD)	Engine Room Main Wire and Driver Side J/B (Left Kick Panel)
DE	87 (LHD)	Instrument Panel Wire and Driver Side J/B (Left Kick Panel)
DF		
DG		
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
PE	94 (LHD)	Instrument Panel Wire and Passenger Side J/B (Right Kick Panel)
PG		

## □ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	142 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)

## ▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	140 (LHD)	Radiator Side Support RH
EC	140 (LHD)	Radiator Side Support LH
IG	142 (LHD)	Left Side of Instrument Panel
IH	142 (LHD)	Right Side of Shift Lever
II		
BM	146 (LHD)	Quarter Panel LH

## ○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E4	140 (LHD)	Engine Room Main Wire	E6	140 (LHD)	Engine Room Main Wire

