

TURN SIGNAL AND HAZARD WARNING LIGHT (RHD)

SERVICE HINTS

DRIVER SIDE J/B ECU

7-GROUND : Always approx. 12 volts

C14 COMBINATION SW

1-GROUND : Always approx. 12 volts

2-GROUND : Approx. 12 volts with ignition SW at **ON** or **ST** position

8-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C12	130 (RHD)	F9	127 (RHD)	J24	135 (RHD)
C14	130 (RHD)	H17	A 131 (RHD)	P7	132 (RHD)
D4	C 131 (RHD)		B 131 (RHD)	R10	136 (RHD)
F6	127 (RHD)	J14 131 (RHD)		R12	136 (RHD)
F7	127 (RHD)	J15	A 131 (RHD)		
F8	127 (RHD)	J16	B 131 (RHD)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DD	99 (RHD)	Engine Room Main Wire and Driver Side J/B (Right Kick Panel)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DF		
DG		
LA	110	Floor No.2 Wire and Luggage Room J/B (Luggage Room Left)
PE	105 (RHD)	Instrument Panel Wire and Passenger Side J/B (Left Kick Panel)
PG		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID3	154 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
EA	152 (RHD)	Radiator Side Support RH
EC	152 (RHD)	Radiator Side Support LH
IH	154 (RHD)	Left Side of Shift Lever
II		
IK	154 (RHD)	Right Side of Instrument Panel
BM	158 (RHD)	Quarter Panel LH

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E4	152 (RHD)	Engine Room Main Wire	E6	152 (RHD)	Engine Room Main Wire

