

VIBRATION SEAT (RHD)

SYSTEM OUTLINE

VIBRATION SEAT OPERATION

If the vibration SW on the START side is turned to ON when the ignition SW is on, the signal is sent to the vibration ECU through the rear seat ECU. And the vibration ECU vibrates the vibrator at about 30 Hz. If the vibration SW on the start side is kept being depressed, the vibration increases to about 60 Hz. Then it decreases to about 1Hz and increases again. The strength of vibration can be adjusted at will. However, the operation will halt under the following conditions:

- * When the vibration SW on the STOP side is turned to ON.
- * When the ignition SW is turned to OFF
- * When the manual operation of the power seat (Rear passenger's seat) is performed.
- * When the vibration SW on the STOP side is not turned to ON even after 30 minutes from the operation.

SERVICE HINTS

V10, V11 VIBRATION SEAT ECU LH, RH

- 5-GROUND : Approx. 12 volts with ignition SW at ON or ST position
- 10-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
D25	134 (RHD)	R15	136 (RHD)	V10	139 (RHD)
F17	134 (RHD)	R16	136 (RHD)	V11	139 (RHD)
J24	135 (RHD)	R27	139 (RHD)	V12	139 (RHD)
J27	135 (RHD)	R28	139 (RHD)	V13	139 (RHD)
J31	139 (RHD)	R29	139 (RHD)		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
DE	100 (RHD)	Instrument Panel Wire and Driver Side J/B (Right Kick Panel)
DI	101 (RHD)	Floor Wire and Driver Side J/B (Right Kick Panel)
PI	107 (RHD)	Floor No.2 Wire and Passenger Side J/B (Left Kick Panel)
PJ		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	154 (RHD)	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IG1	156 (RHD)	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
II1	156 (RHD)	Front Door RH Wire and Floor Wire (Right Kick Panel)
BA2	158 (RHD)	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BB2	158 (RHD)	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BC1	158 (RHD)	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)
BH1	162 (RHD)	Rear Seat LH Wire and Floor No.2 Wire (Under the Rear Passenger's LH Seat)
BI1	162 (RHD)	Rear Seat RH Wire and Floor Wire (Under the Rear Passenger's RH Seat)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
BM	158 (RHD)	Quarter Panel LH
BN	158 (RHD)	Rear Floor Partition Panel RH
BP	162 (RHD)	Rear Passenger LH Seat Back
BQ	162 (RHD)	Rear Passenger RH Seat Back

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B10	162 (RHD)	Rear Seat LH Wire	B12	162 (RHD)	Rear Seat RH Wire

