



# J POWER SOURCE (Current Flow Chart)

The chart below shows the route by which current flows from the battery to each electrical source (Fusible Link, Circuit Breaker, Fuse, etc.) and other Parts.

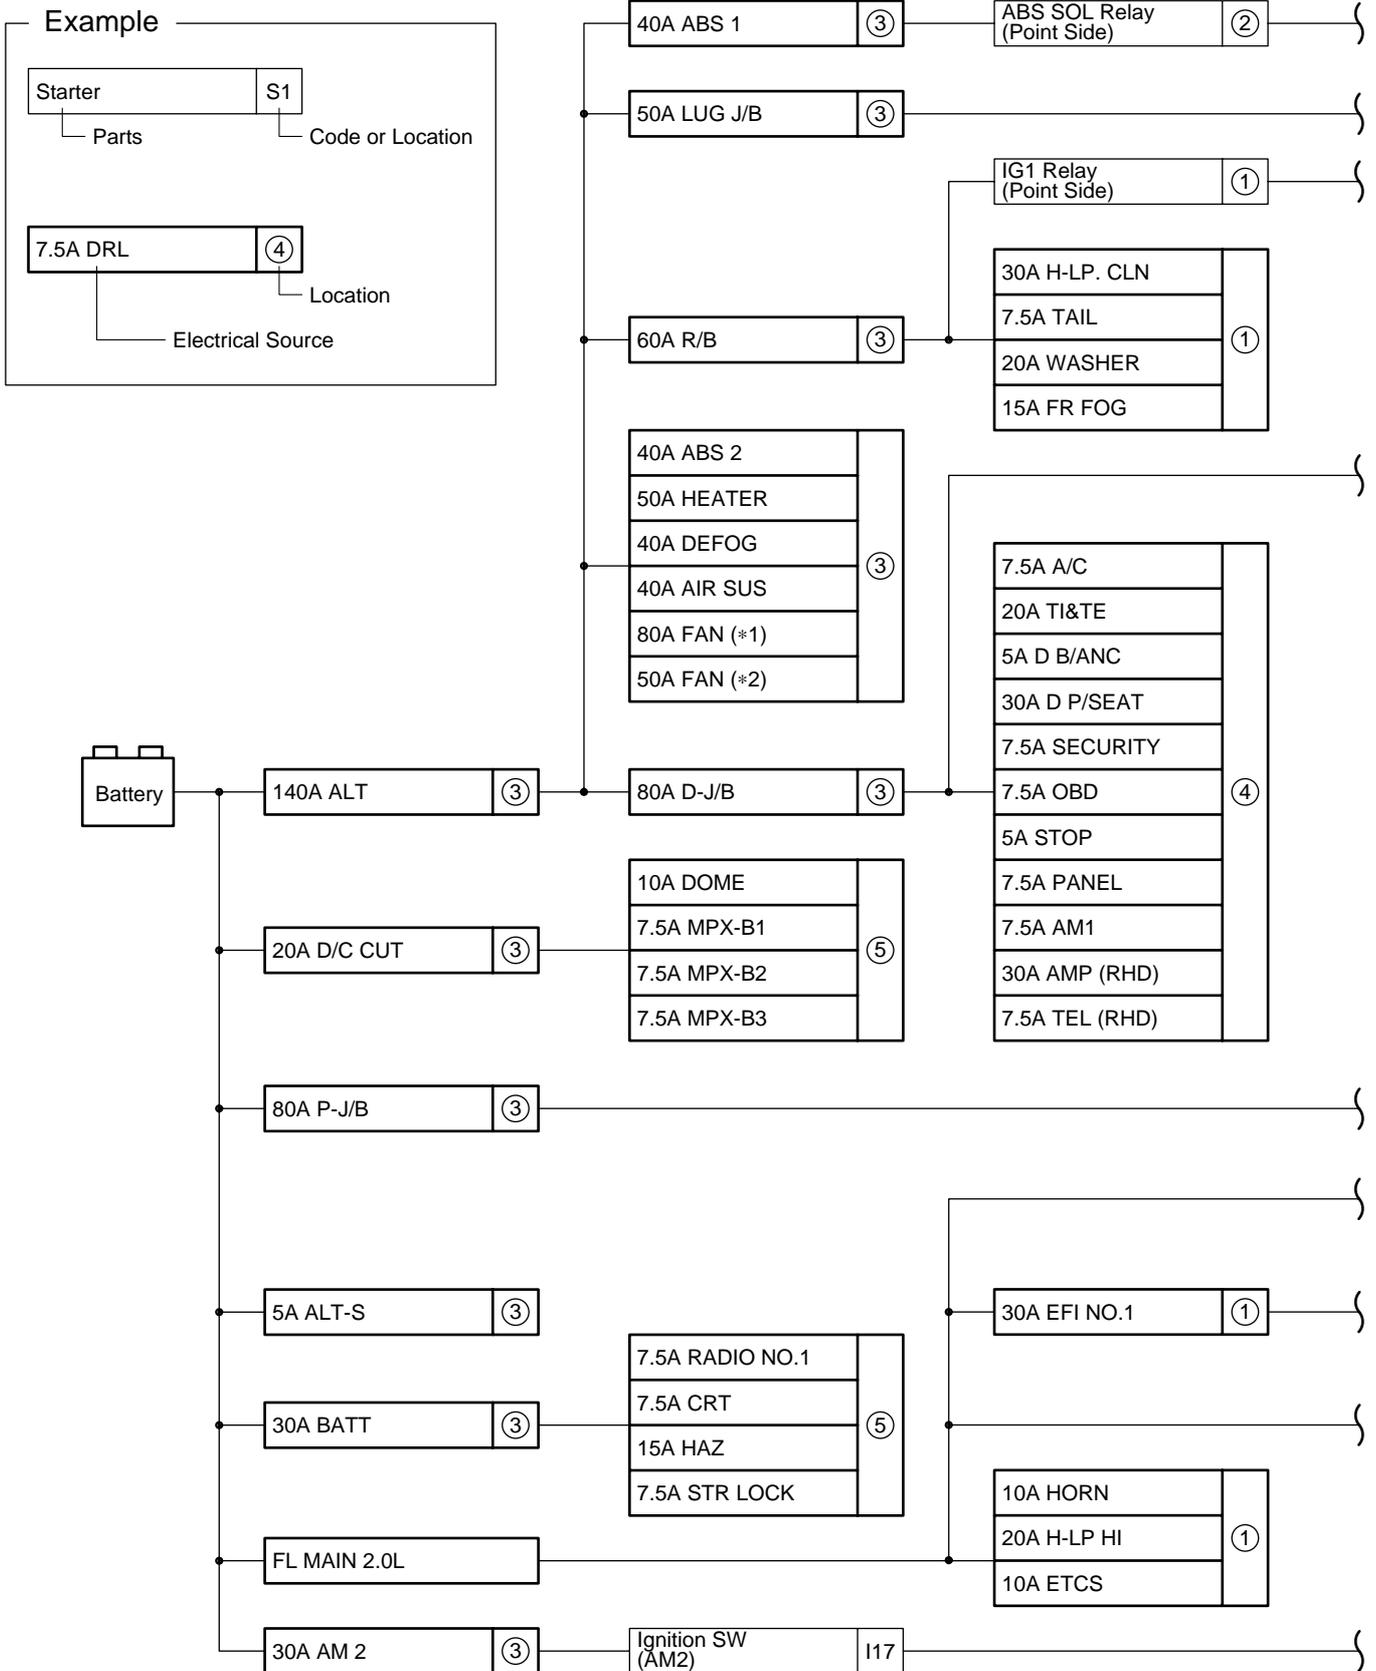

\*1 : Australia, G.C.C.  
\*2 : Europe

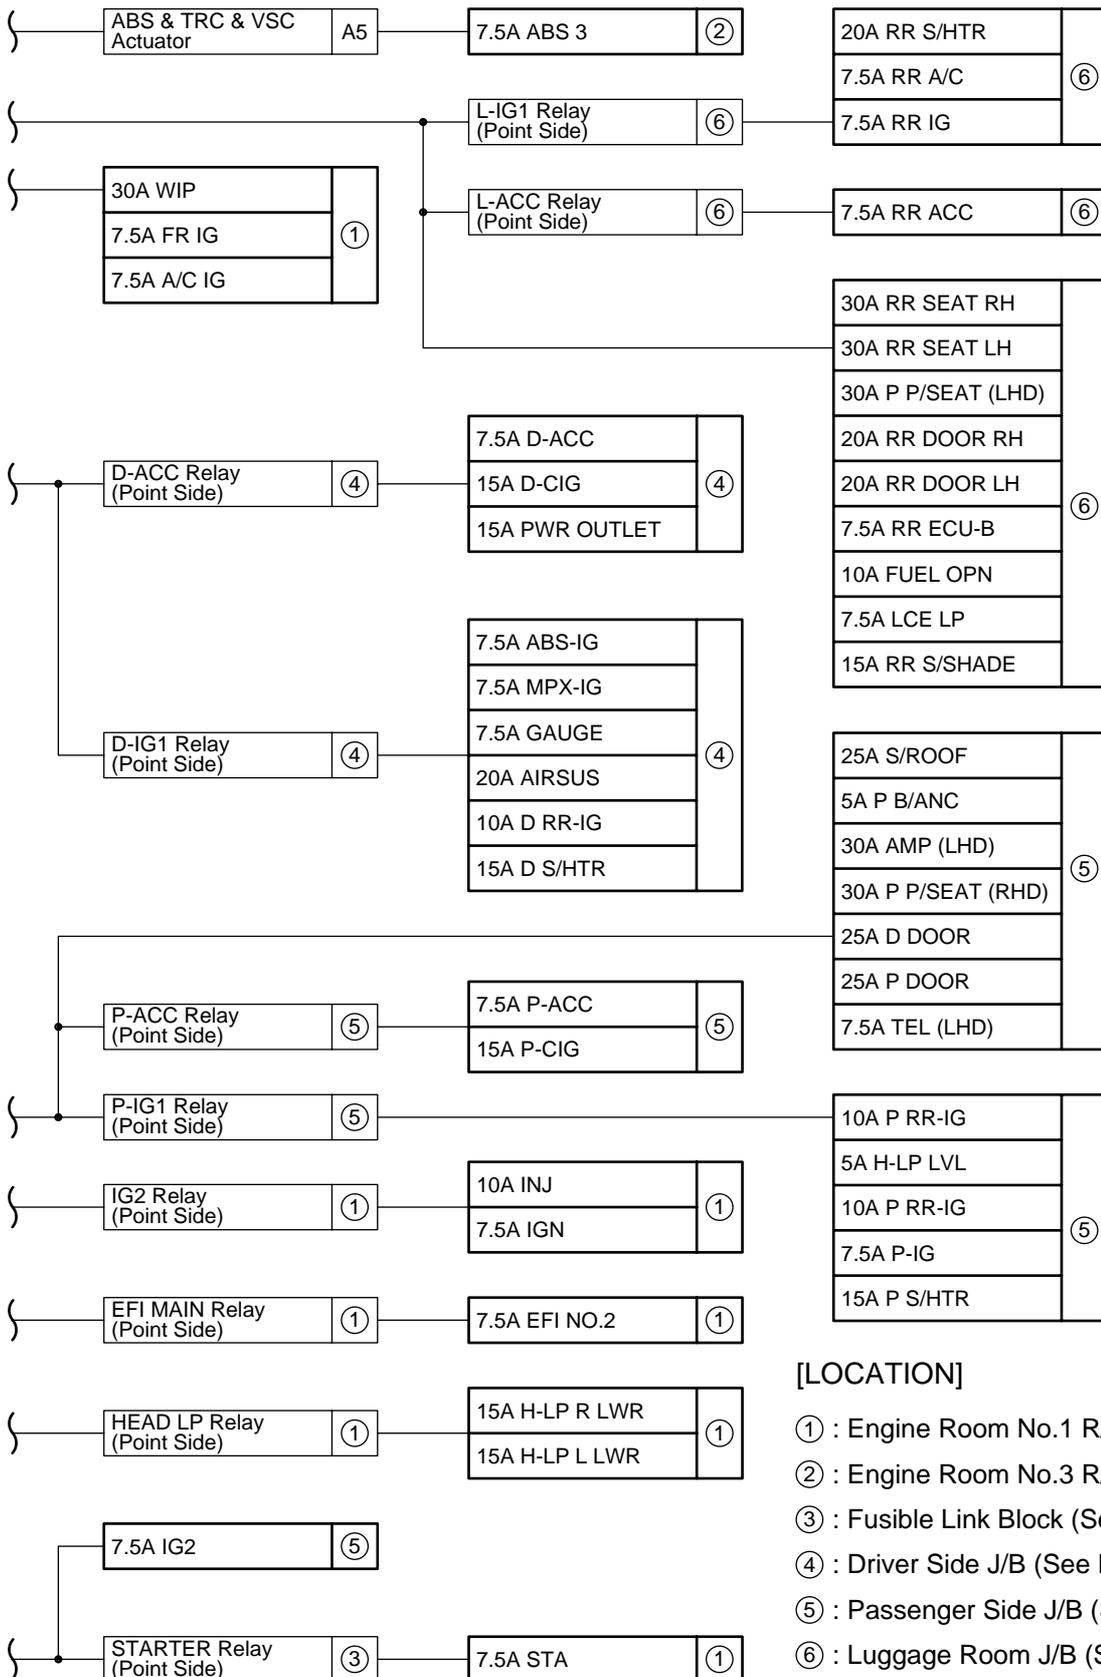

[LOCATION]

- ① : Engine Room No.1 R/B (See Page 81)
- ② : Engine Room No.3 R/B (See Page 83)
- ③ : Fusible Link Block (See Page 84,85)
- ④ : Driver Side J/B (See Page 86,98)
- ⑤ : Passenger Side J/B (See Page 92,104)
- ⑥ : Luggage Room J/B (See Page 110)