


Position of Parts in Engine Compartment

[LHD]

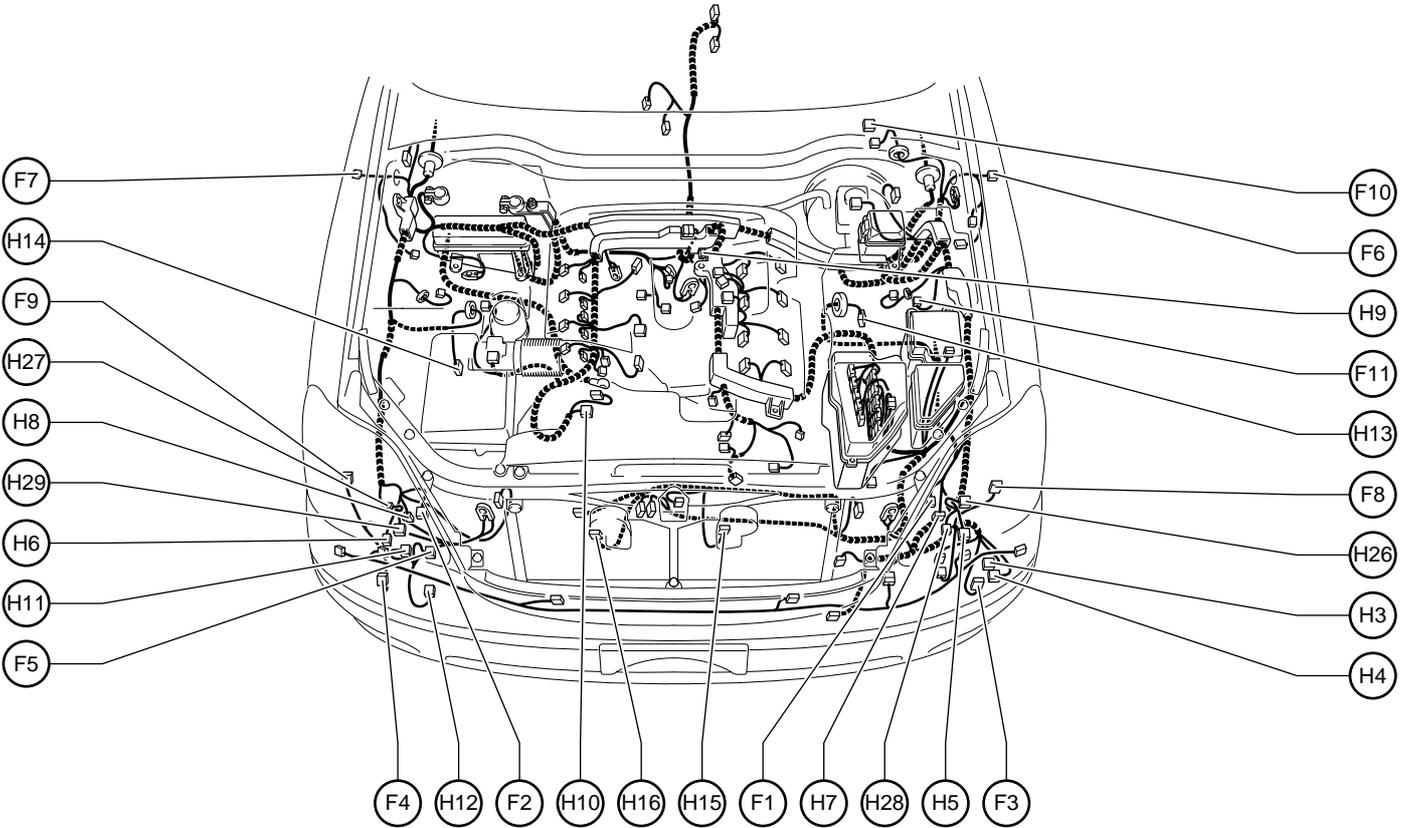

F 1 Front Clearance Light LH

F 2 Front Clearance Light RH

F 3 Front Fog Light LH

F 4 Front Fog Light RH

F 5 Front Height Control Valve

F 6 Front Side Turn Signal Light LH

F 7 Front Side Turn Signal Light RH

F 8 Front Turn Signal Light LH

F 9 Front Turn Signal Light RH

F 10 Front Wiper Motor

F 11 Fuel Pump Resistor

H 3 Headlight Cleaner Control Relay

H 4 Headlight Cleaner Motor

H 5 Headlight Control ECU LH

H 6 Headlight Control ECU RH

H 7 Headlight LH (High)

H 8 Headlight RH (High)

H 9 Heated Oxygen Sensor (Bank 1 Sensor 1)

H 10 Heated Oxygen Sensor (Bank 2 Sensor 1)

H 11 Height Control Compressor

H 12 Height Control Exhaust Valve

H 13 Height Control Sensor Front LH

H 14 Height Control Sensor Front RH

H 15 Horn (High)

H 16 Horn (Low)

H 26 Headlight Beam Level Control Actuator LH

H 27 Headlight Beam Level Control Actuator RH

H 28 Headlight LH

H 29 Headlight RH