


Position of Parts in Engine Compartment

[LHD]

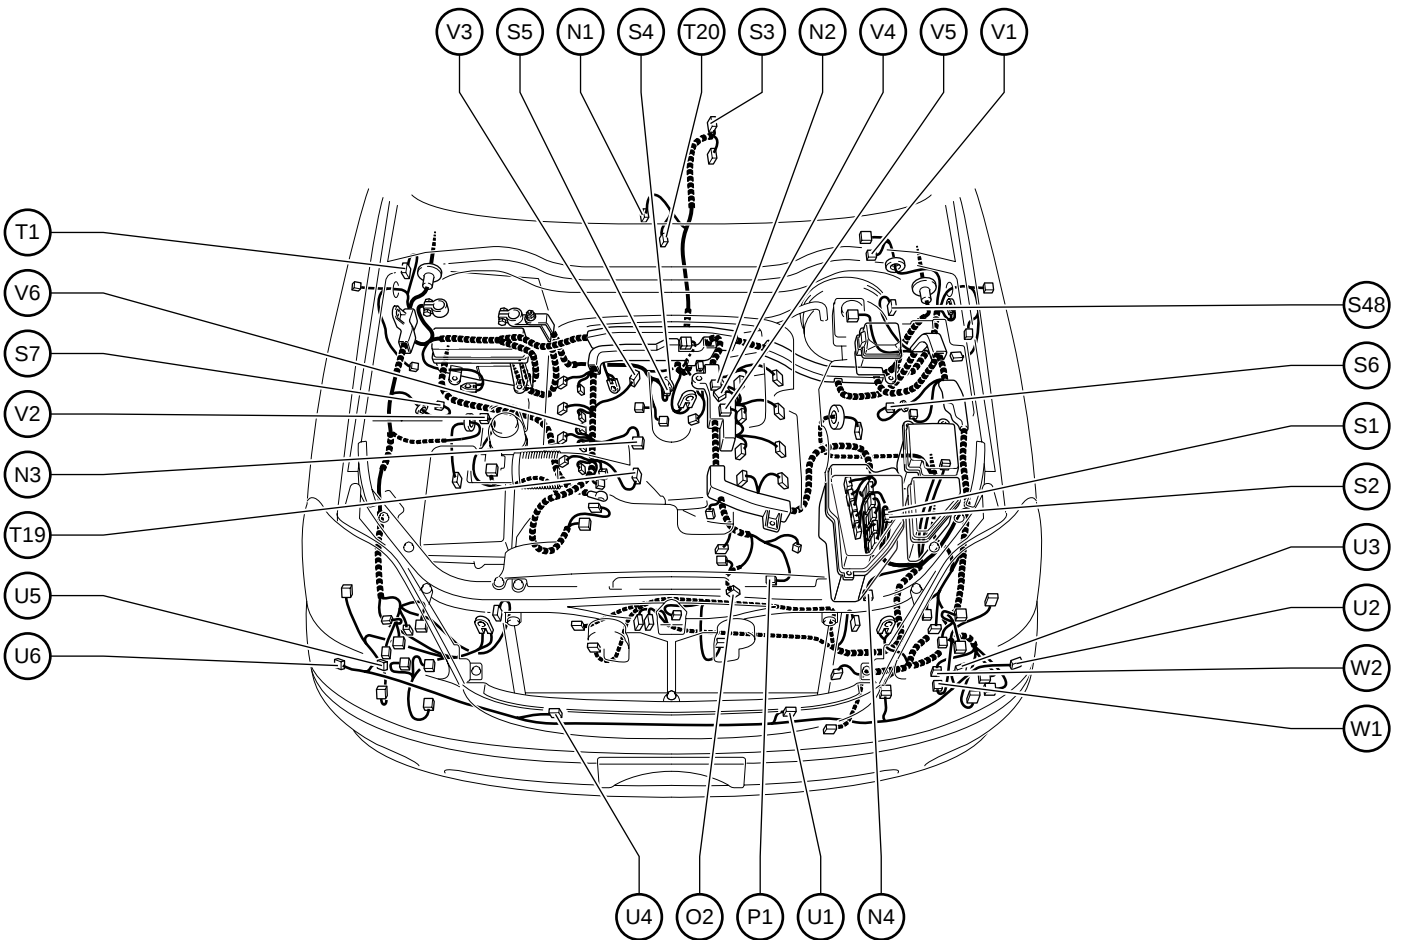

N 1 A/T Indicator Light SW
Back-Up Light SW
Neutral Start SW
N 2 Noise Filter (Ignition Left Bank)
N 3 Noise Filter (Ignition Right Bank)
N 4 Noise Filter (Rear Window Defogger)

O 2 Oil Pressure SW

P 1 PPS Solenoid

S 1 Short Connector
S 2 Short Connector
S 3 Speed Sensor
S 4 Starter
S 5 Starter
S 6 Suspension Control Actuator Front LH
S 7 Suspension Control Actuator Front RH
S48 Skid Control ECU with Actuator

T 1 Theft Deterrent Horn
T 19 Throttle Control Motor
Throttle Position Sensor
T 20 Turbine Speed Sensor

U 1 Ultrasonic Sensor (Front Left Center)
U 2 Ultrasonic Sensor (Front Left Side)
U 3 Ultrasonic Sensor (Front Left)
U 4 Ultrasonic Sensor (Front Right Center)
U 5 Ultrasonic Sensor (Front Right Side)
U 6 Ultrasonic Sensor (Front Right)

V 1 Variable Motor
V 2 Variable Resistor
V 3 VSV (ACIS)
V 4 VSV (EVAP)
V 5 VVT Sensor LH
V 6 VVT Sensor RH

W 1 Washer Level Sensor
W 2 Washer Motor