


Position of Parts in Body

[LHD]

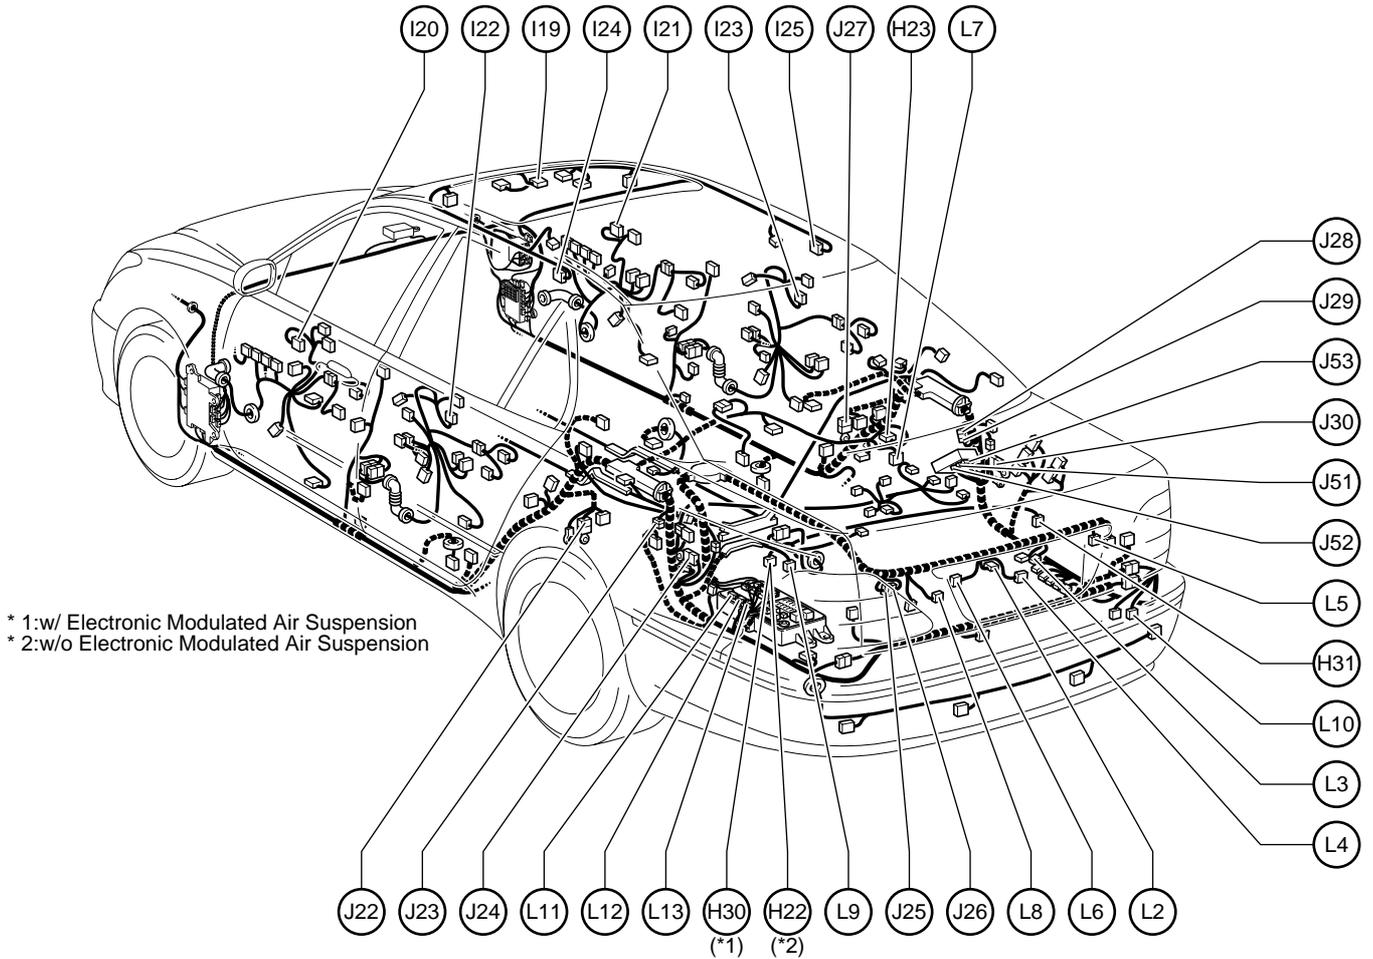

- | | | | |
|------|--|------|--|
| H22 | Height Control Sensor Rear | J 28 | Junction Connector |
| H23 | High Mounted Stop Light | J 29 | Junction Connector |
| H30 | Height Control Sensor Rear LH | J 30 | Junction Connector |
| H31 | Height Control Sensor Rear RH | J 51 | Junction Connector |
| I 19 | Door Lock Control Receiver
Inner Mirror | J 52 | Junction Connector |
| I 20 | Inside Handle Illumination Front LH | J 53 | Junction Connector |
| I 21 | Inside Handle Illumination Front RH | L 2 | License Plate Light LH |
| I 22 | Inside Handle Illumination Rear LH | L 3 | License Plate Light RH |
| I 23 | Inside Handle Illumination Rear RH | L 4 | Luggage Compartment Door Closer Motor |
| I 24 | Interior Light Rear LH | L 5 | Luggage Electrical Key SW |
| I 25 | Interior Light Rear RH | L 6 | Luggage Compartment Door Key Unlock SW |
| J 22 | Junction Connector | L 7 | Luggage Compartment Light No.1 |
| J 23 | Junction Connector | L 8 | Luggage Compartment Light No.2 |
| J 24 | Junction Connector | L 9 | Luggage Oscillator (Inner) |
| J 25 | Junction Connector | L 10 | Luggage Oscillator (Outer) |
| J 26 | Junction Connector | L 11 | Luggage Room J/B ECU |
| J 27 | Junction Connector | L 12 | Luggage Room J/B ECU |
| | | L 13 | Luggage Room J/B ECU |