


E ELECTRICAL WIRING ROUTING

Position of Parts in Body

[LHD]

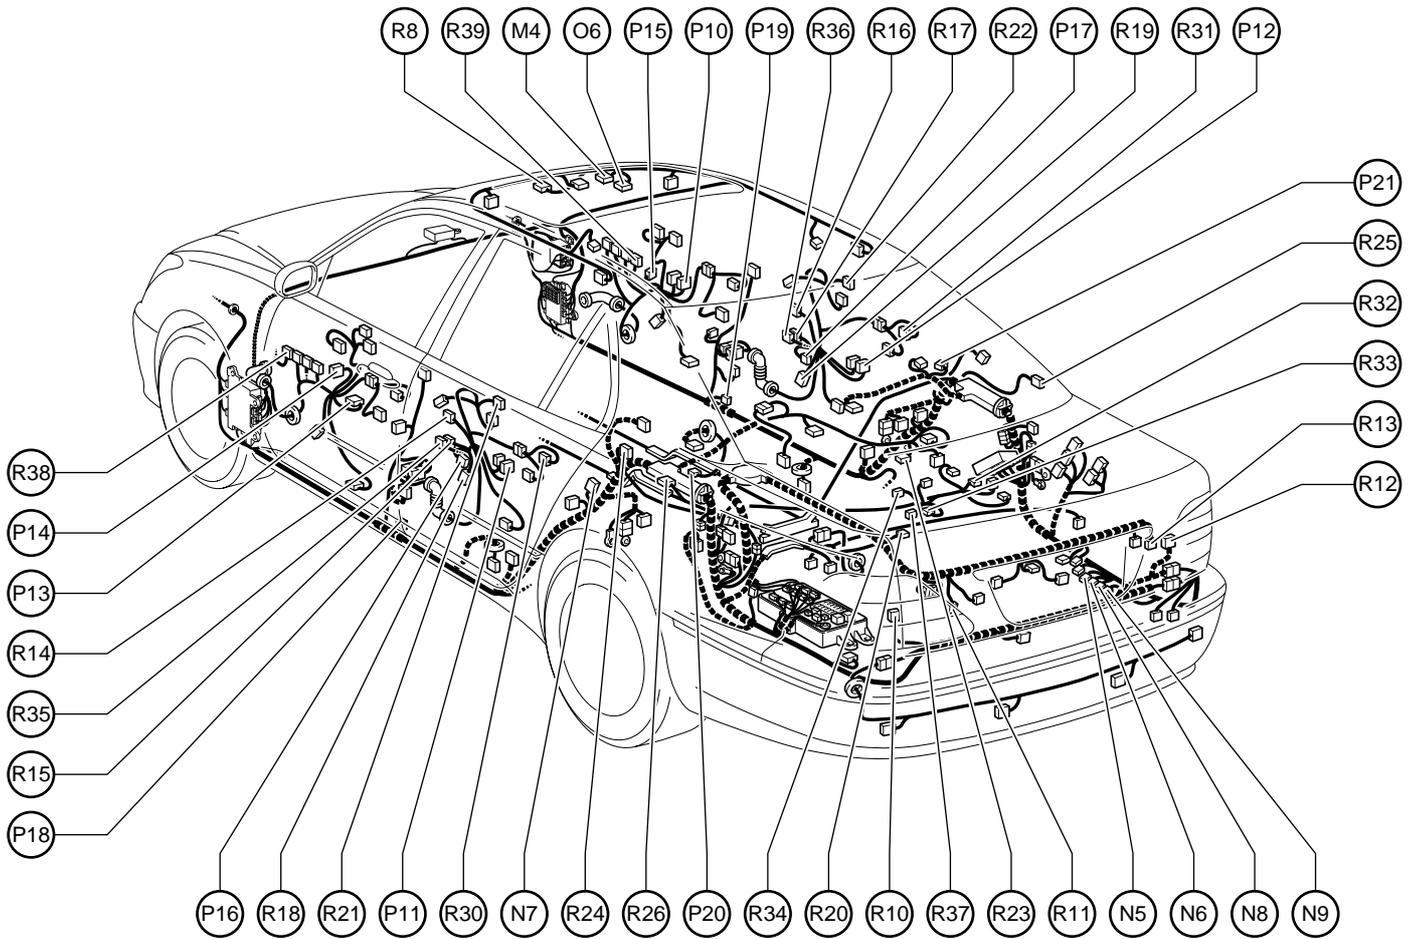

M 4 Moon Roof Control ECU and Motor

N 5 Navigation ECU

N 6 Navigation ECU

N 7 Noise Filter (Rear Window Defogger)

N 8 Navigation ECU

N 9 Navigation ECU

O 6 Overhead J/B

P 10 Power Window Control SW Front RH

P 11 Power Window Control SW Rear LH

P 12 Power Window Control SW Rear RH

P 13 Power Window Master SW

P 14 Power Window Motor Front LH

P 15 Power Window Motor Front RH

P 16 Power Window Motor Rear LH

P 17 Power Window Motor Rear RH

P 18 Pretensioner Front LH

P 19 Pretensioner Front RH

P 20 Pretensioner Rear LH

P 21 Pretensioner Rear RH

R 8 Rain Sensor

R 10 Rear Combination Light LH

R 11 Rear Combination Light LH

R 12 Rear Combination Light RH

R 13 Rear Combination Light RH

R 14 Rear Door LH ECU

R 15 Rear Door LH ECU

R 16 Rear Door RH ECU

R 17 Rear Door RH ECU

R 18 Rear Door Speaker LH

R 19 Rear Door Speaker RH

R 20 Rear Height Control Valve

R 21 Rear Seat Memory SW LH

R 22 Rear Seat Memory SW RH

R 23 Rear Sunshade Control Relay

R 24 Rear Window Defogger

R 25 Rear Window Defogger

R 26 Room Oscillator (Rear)

R 30 Rear Door Outside Handle LH

R 31 Rear Door Outside Handle RH

R 32 Rear Blower Motor

R 33 Rear Blower Resistor

R 34 Rear Damper Servo Motor

R 35 Rear Door with Motor Lock Assembly LH

R 36 Rear Door with Motor Lock Assembly RH

R 37 Rear Magnetic Valve

R 38 Remote Control Mirror LH

R 39 Remote Control Mirror RH