


## Position of Parts in Engine Compartment

[RHD]

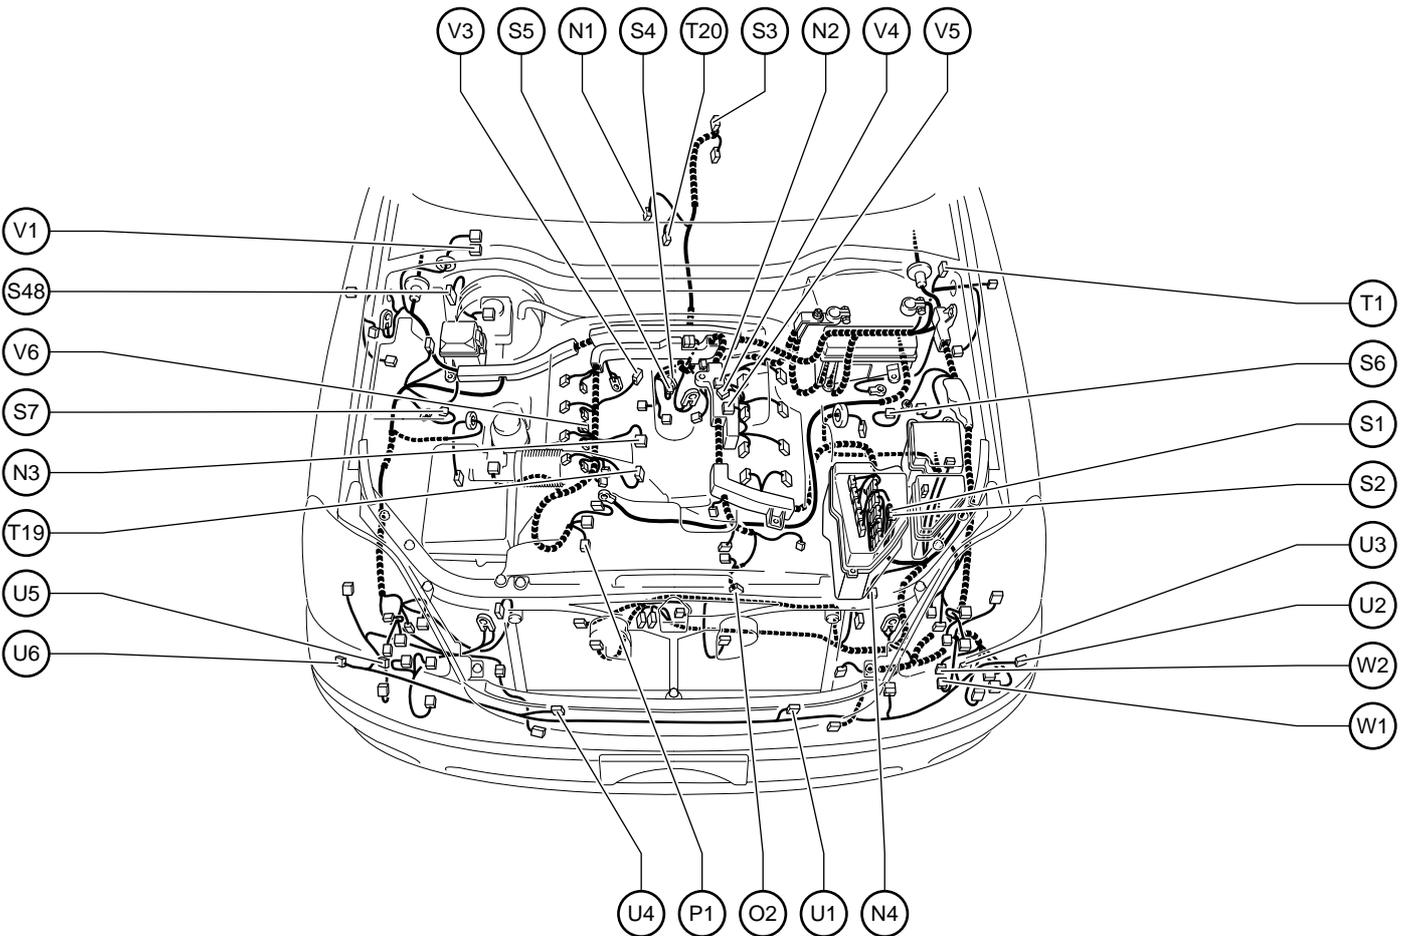

N 1 A/T Indicator Light SW  
Back-Up Light SW  
Neutral Start SW

N 2 Noise Filter (Ignition Left Bank)  
N 3 Noise Filter (Ignition Right Bank)  
N 4 Noise Filter (Rear Window Defogger)

O 2 Oil Pressure SW

P 1 PPS Solenoid

S 1 Short Connector  
S 2 Short Connector  
S 3 Speed Sensor  
S 4 Starter  
S 5 Starter  
S 6 Suspension Control Actuator Front LH  
S 7 Suspension Control Actuator Front RH  
S48 Skid Control ECU with Actuator

T 1 Theft Deterrent Horn  
T19 Throttle Control Motor  
Throttle Position Sensor  
T20 Turbine Speed Sensor

U 1 Ultrasonic Sensor (Front Left Center)  
U 2 Ultrasonic Sensor (Front Left Side)  
U 3 Ultrasonic Sensor (Front Left)  
U 4 Ultrasonic Sensor (Front Right Center)  
U 5 Ultrasonic Sensor (Front Right Side)  
U 6 Ultrasonic Sensor (Front Right)

V 1 Variable Motor  
V 3 VSV (ACIS)  
V 4 VSV (EVAP)  
V 5 VVT Sensor LH  
V 6 VVT Sensor RH

W 1 Washer Level Sensor  
W 2 Washer Motor