


Position of Parts in Instrument Panel

[RHD]

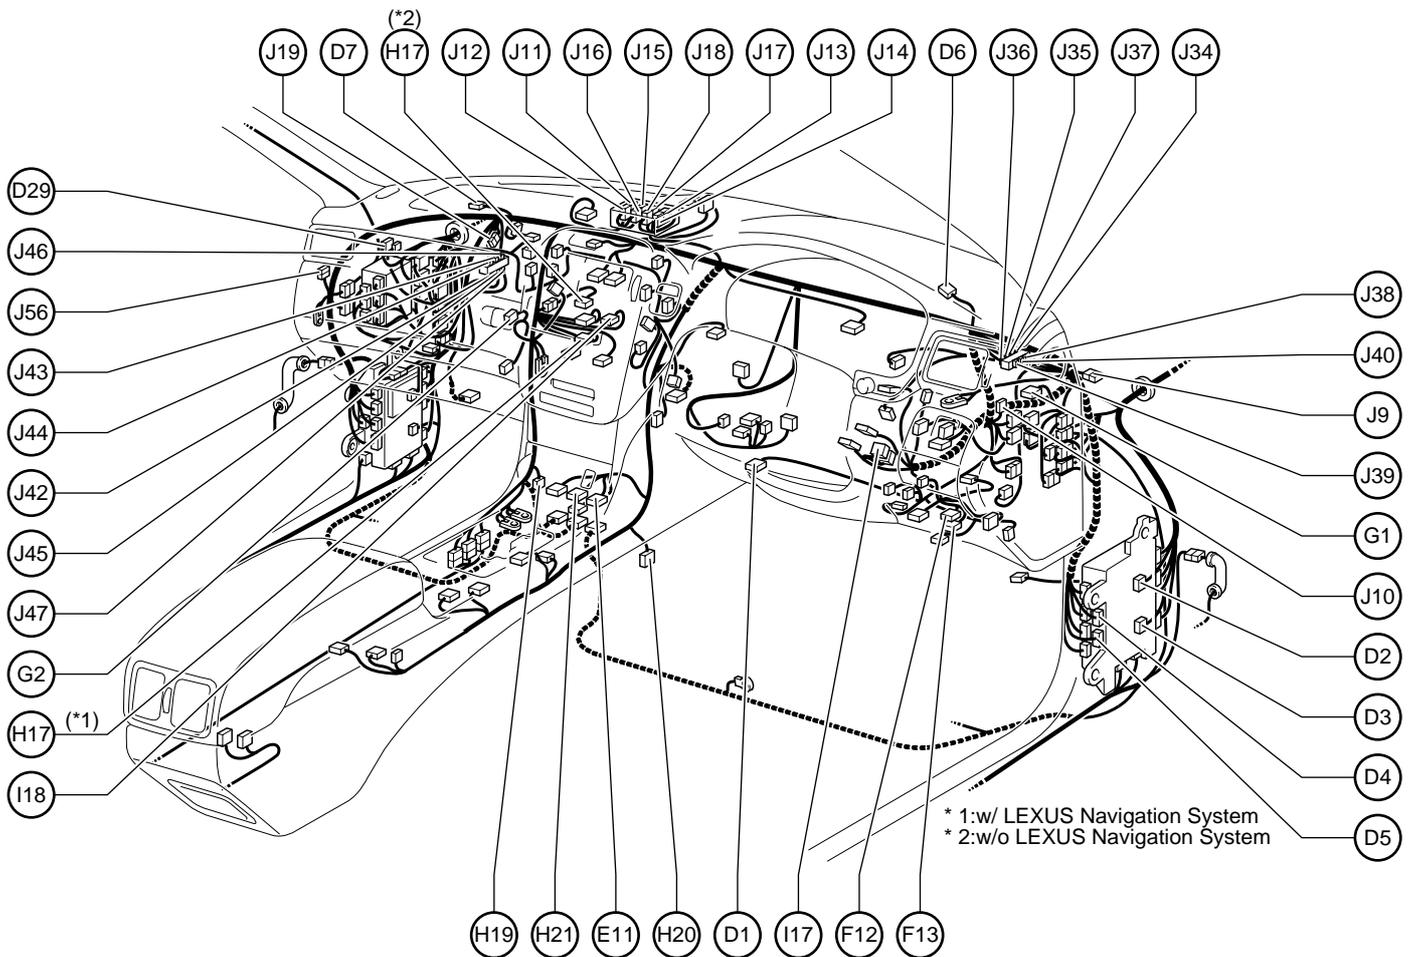

D 1	DLC3	J 9	Junction Connector
D 2	Driver Side J/B ECU	J 10	Junction Connector
D 3	Driver Side J/B ECU	J 11	Junction Connector
D 4	Driver Side J/B ECU	J 12	Junction Connector
D 5	Driver Side J/B ECU	J 13	Junction Connector
D 6	Duct Sensor (Driver's Side)	J 14	Junction Connector
D 7	Duct Sensor (Front Passenger's Side)	J 15	Junction Connector
D29	Distance Control ECU	J 16	Junction Connector
E 11	ECT Pattern Select SW	J 17	Junction Connector
F 12	Fuel Lid Opener SW	J 18	Junction Connector
F 13	Fuel Lid Opener SW Illumination	J 19	Junction Connector
G 1	Gateway ECU	J 34	Junction Connector
G 2	Glove Box Light	J 35	Junction Connector
H17	Hazard SW	J 36	Junction Connector
H19	Heated Oxygen Sensor (Bank 1 Sensor 2)	J 37	Junction Connector
H20	Heated Oxygen Sensor (Bank 2 Sensor 2)	J 38	Junction Connector
H21	Height Control SW	J 39	Junction Connector
I 17	Ignition SW	J 40	Junction Connector
I 18	Instrument Panel Register	J 42	Junction Connector
		J 43	Junction Connector
		J 44	Junction Connector
		J 45	Junction Connector
		J 46	Junction Connector
		J 47	Junction Connector
		J 56	Junction Connector