


## Connector Joining Wire Harness and Wire Harness

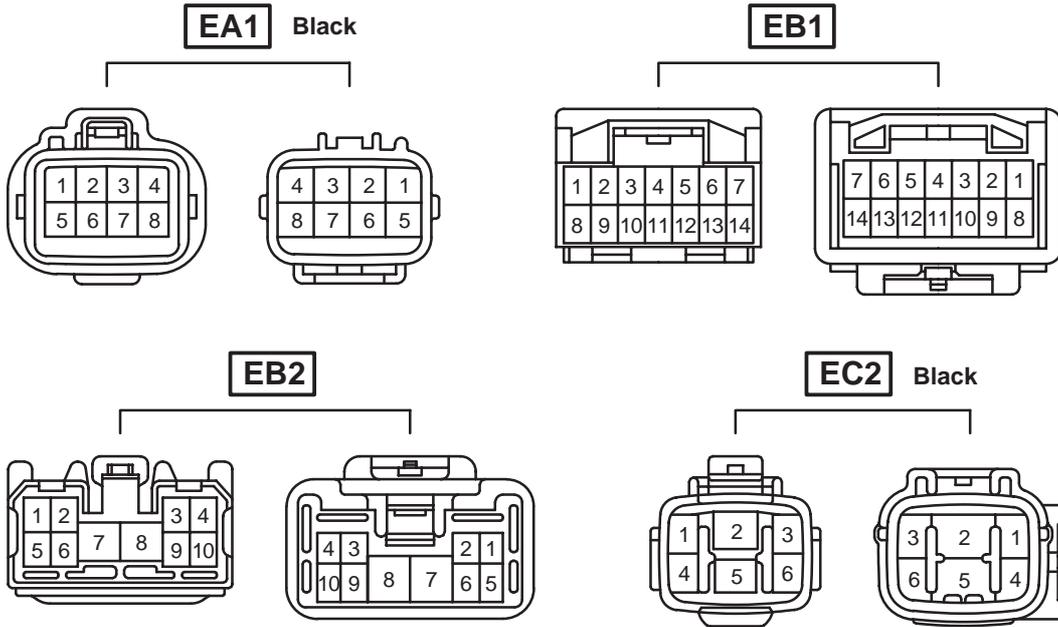

| Code | Joining Wire Harness and Wire Harness (Connector Location)               |
|------|--|
| EA1  | Engine Room No.2 Wire and Engine Room Main Wire (Under the Headlight LH) |
| EB1  | Engine Wire and Engine Room Main Wire (Inside of ECU Box)                |
| EB2  |  |
| EC2  | Engine No.2 Wire and Engine Wire (Behind the Intake Manifold)            |