


## Connector Joining Wire Harness and Wire Harness

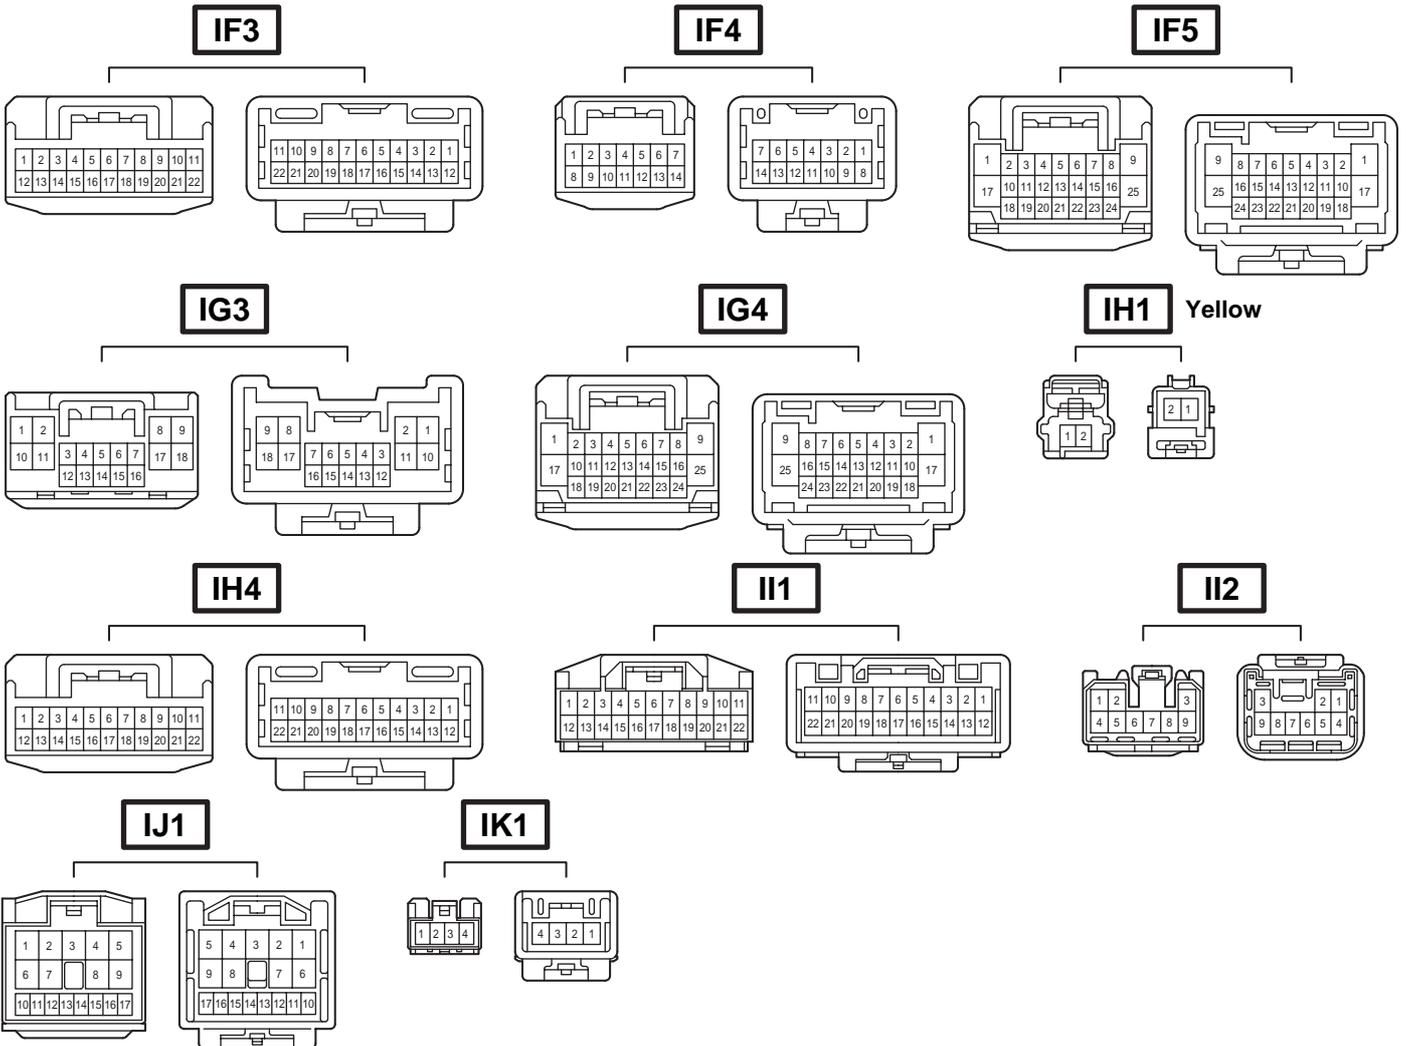

Code	Joining Wire Harness and Wire Harness (Connector Location)
IF3	
IF4	Instrument Panel Wire and Floor Wire (Right Side of Shift Lever)
IF5	
IG3	
IG4	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
IH1	
IH4	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)
II1	
II2	Instrument Panel Wire and Roof Wire (Cowl Side Panel RH)
IJ1	Front Door RH Wire and Floor Wire (Right Kick Panel)
IK1	Instrument Panel Wire and Switch Wire (Center of Instrument Panel)