


Connector Joining Wire Harness and Wire Harness

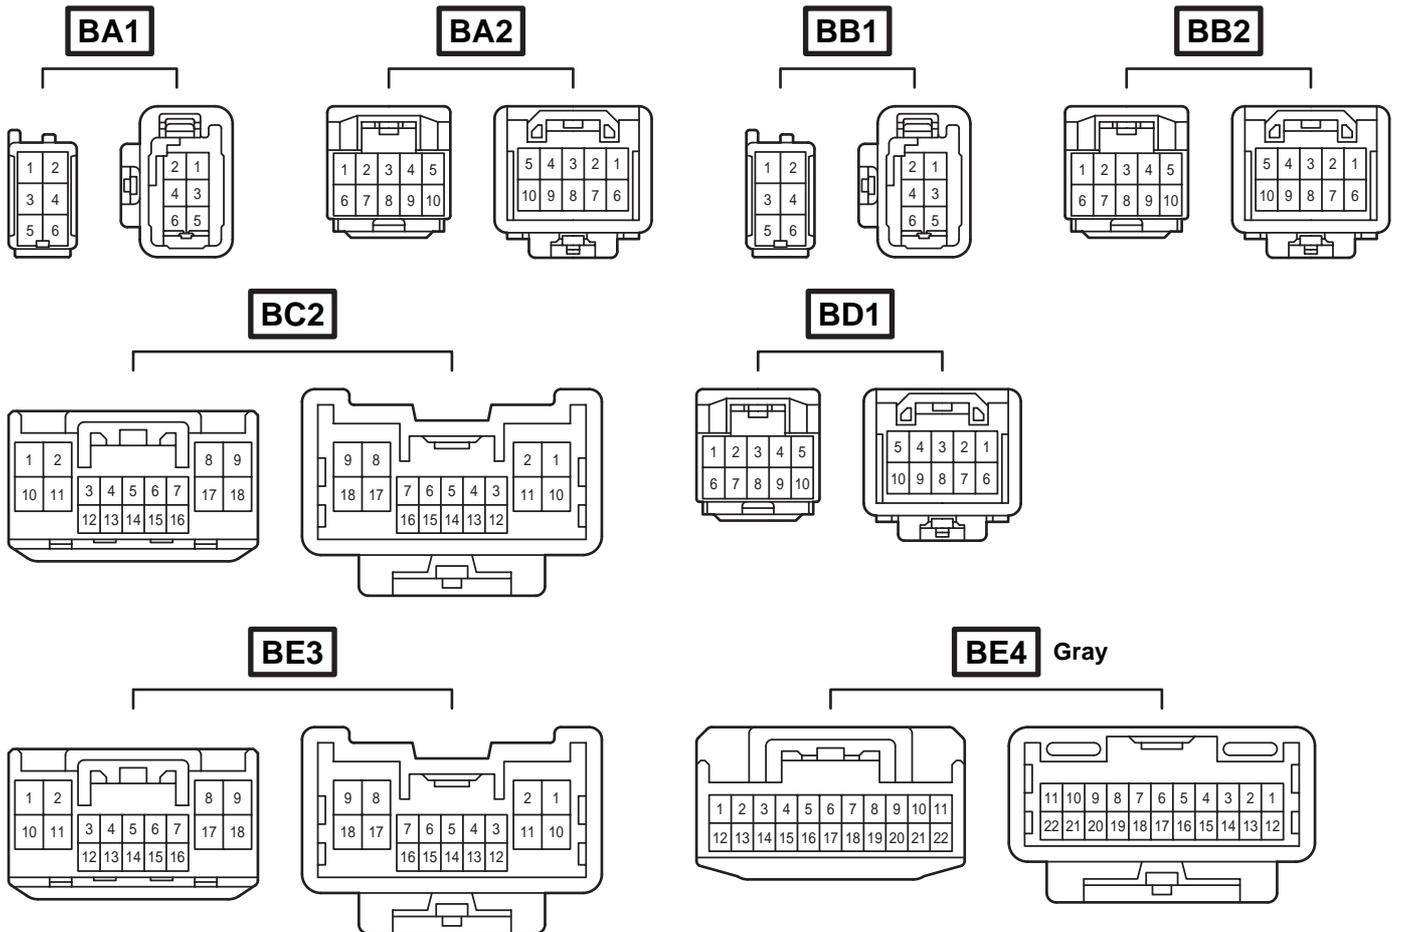

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BA2	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BB1	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BB2	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BC2	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)
BD1	Floor No.3 Wire and Floor No.2 Wire (Lower Back Panel LH)
BE3	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)
BE4	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)