


## Connector Joining Wire Harness and Wire Harness

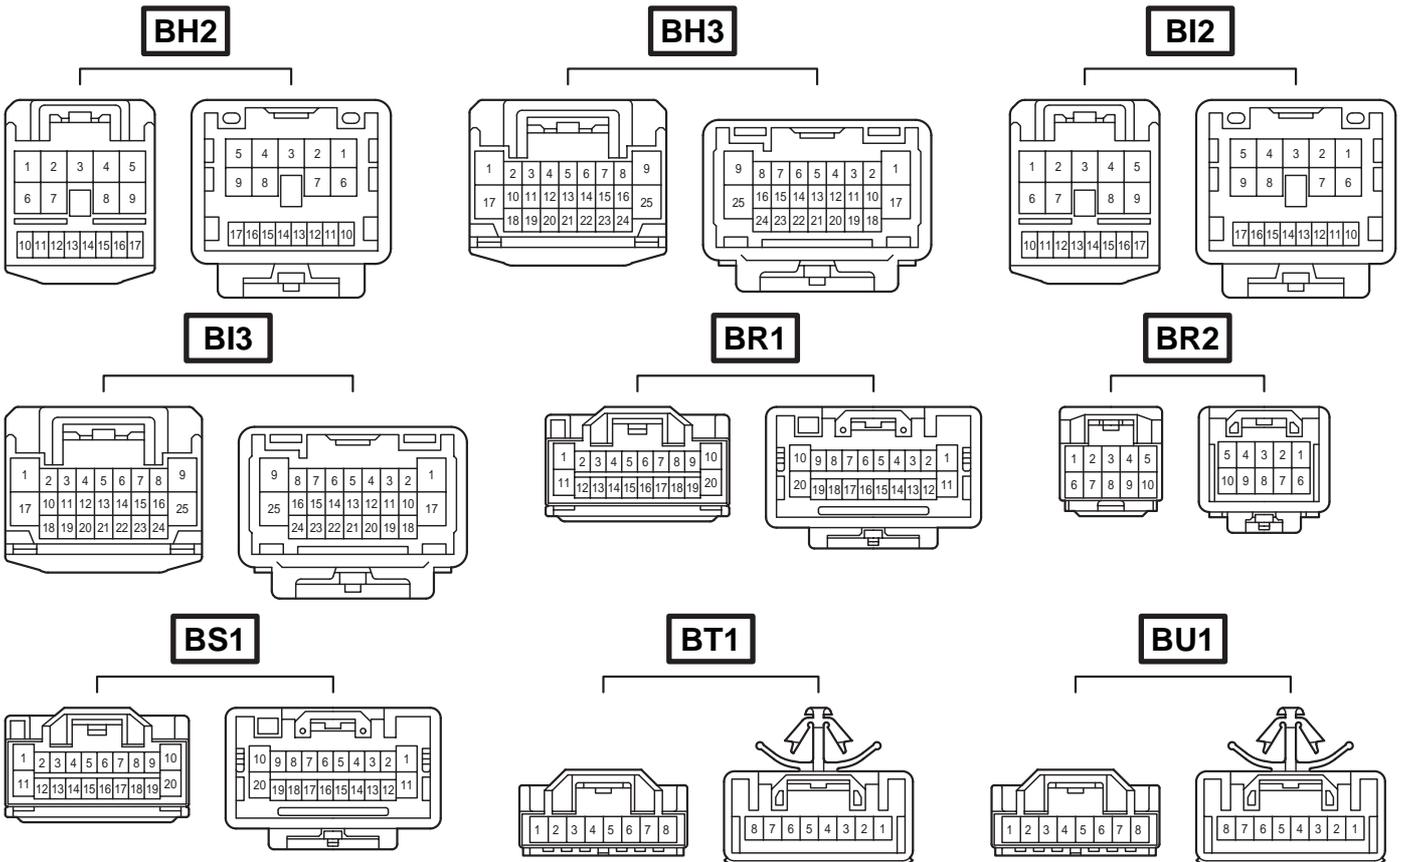

Code	Joining Wire Harness and Wire Harness (Connector Location)
BH2	Rear Seat LH Wire and Floor No.2 Wire (Under the Rear Passenger's LH Seat)
BH3	Rear Seat LH Wire and Floor No.2 Wire (Under the Rear Passenger's LH Seat)
BI2	Rear Seat RH Wire and Floor Wire (Under the Rear Passenger's RH Seat)
BI3	Rear Seat RH Wire and Floor Wire (Under the Rear Passenger's RH Seat)
BR1	Switch Wire and Rear Seat LH Wire (Back the Rear Seat LH)
BR2	Switch Wire and Rear Seat LH Wire (Back the Rear Seat LH)
BS1	Switch Wire and Rear Seat RH Wire (Back the Rear Seat RH)
BT1	Rear Seat LH Wire and Heater Blower Wire LH (Under the Rear Seat LH)
BU1	Rear Seat RH Wire and Heater Blower Wire RH (Under the Rear Seat RH)