


## Connector Joining Wire Harness and Wire Harness

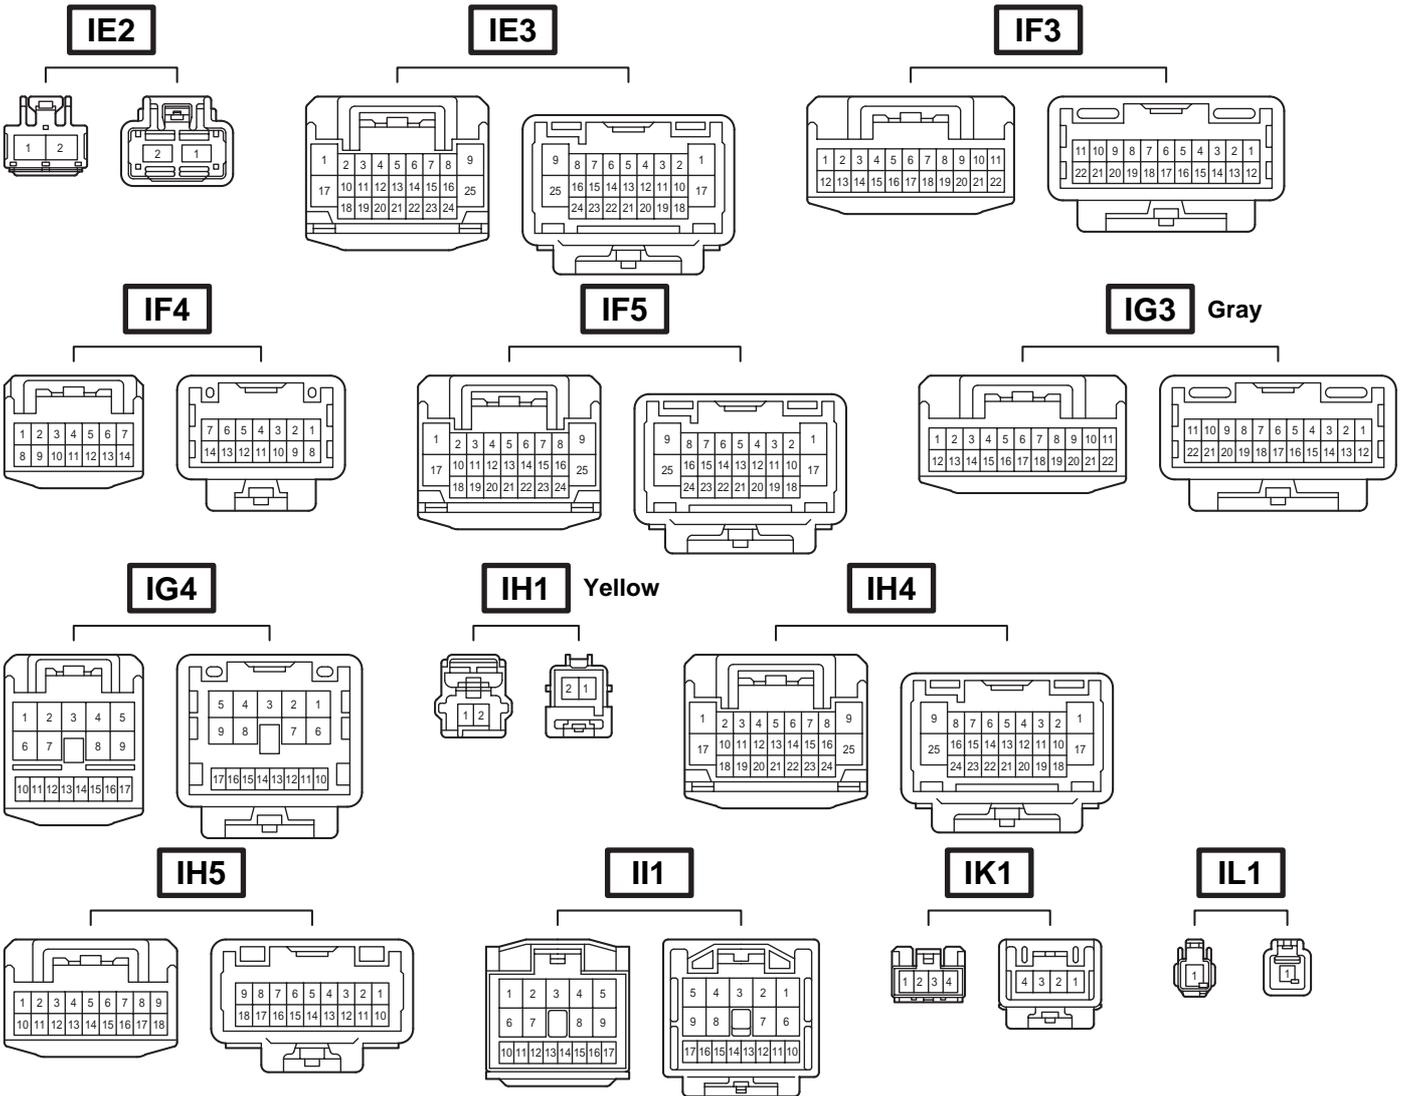

Code	Joining Wire Harness and Wire Harness (Connector Location)
IE2	Engine Room Main Wire and Floor No.2 Wire (Left Kick Panel)
IE3	Engine Room Main Wire and Floor No.2 Wire (Left Kick Panel)
IF3	
IF4	Instrument Panel Wire and Floor Wire (Left Side of Shift Lever)
IF5	
IG3	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
IG4	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
IH1	
IH4	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)
IH5	
II1	Front Door RH Wire and Floor Wire (Right Kick Panel)
IK1	Instrument Panel Wire and Switch Wire (Center of Instrument Panel)
IL1	Instrument Panel Wire and A/C Sub Wire (Left Side of A/C Unit)