


Connector Joining Wire Harness and Wire Harness

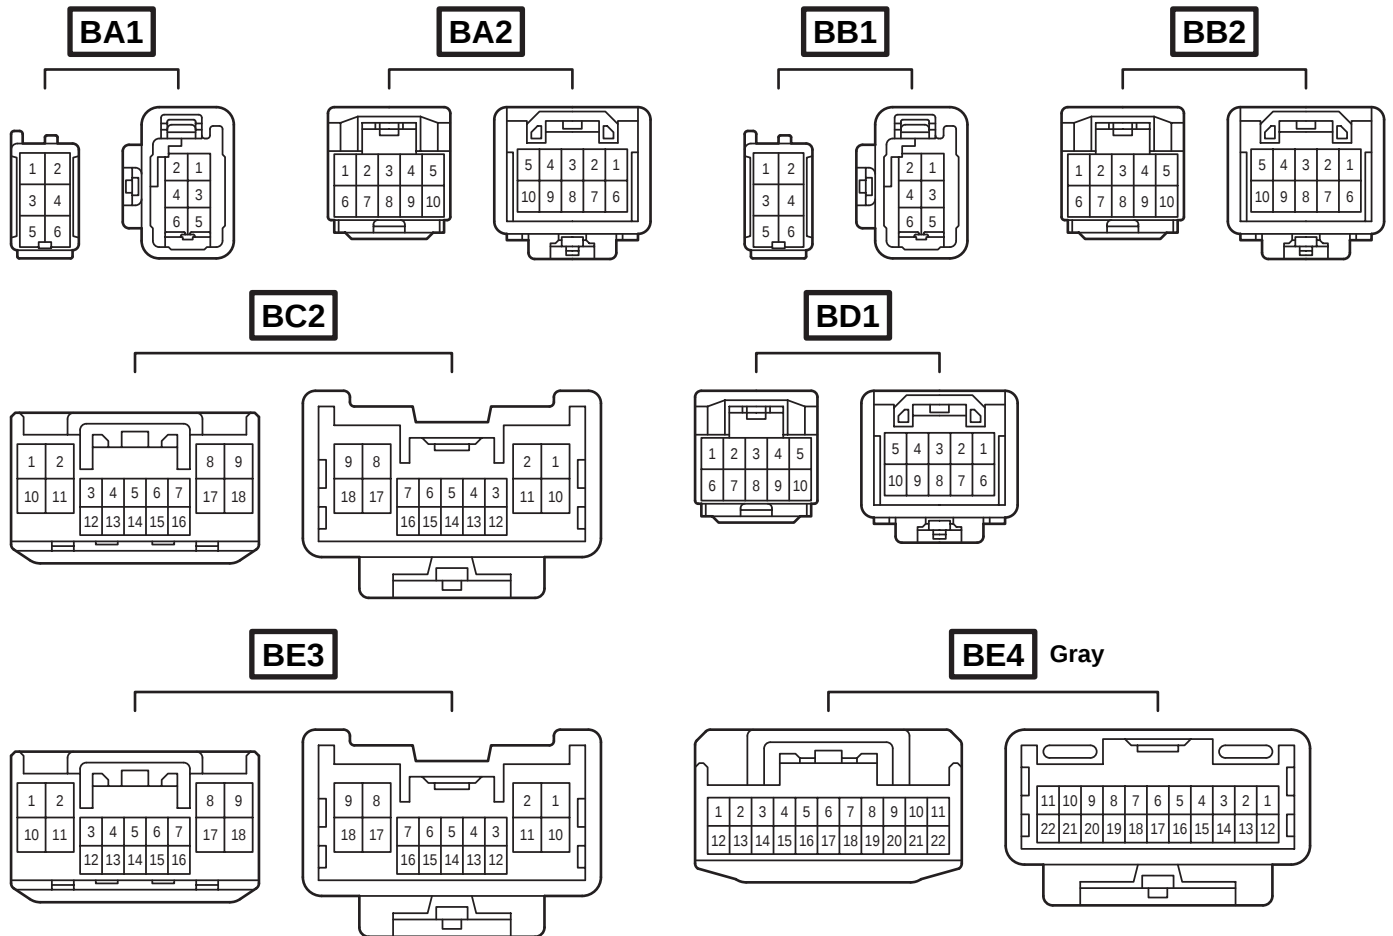

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door No.2 Wire and Floor No.2 Wire (Left Center Pillar)
BA2	Rear Door No.1 Wire and Floor Wire (Right Center Pillar)
BB1	Floor No.2 Wire and Floor Wire (Rear Floor Partition Panel LH)
BB2	Floor No.3 Wire and Floor No.2 Wire (Lower Back Panel LH)
BC2	Floor No.2 Wire and Floor Wire (Lower Back Panel RH)
BD1	
BE3	
BE4	