


Position of Parts in Engine Compartment

[LHD]

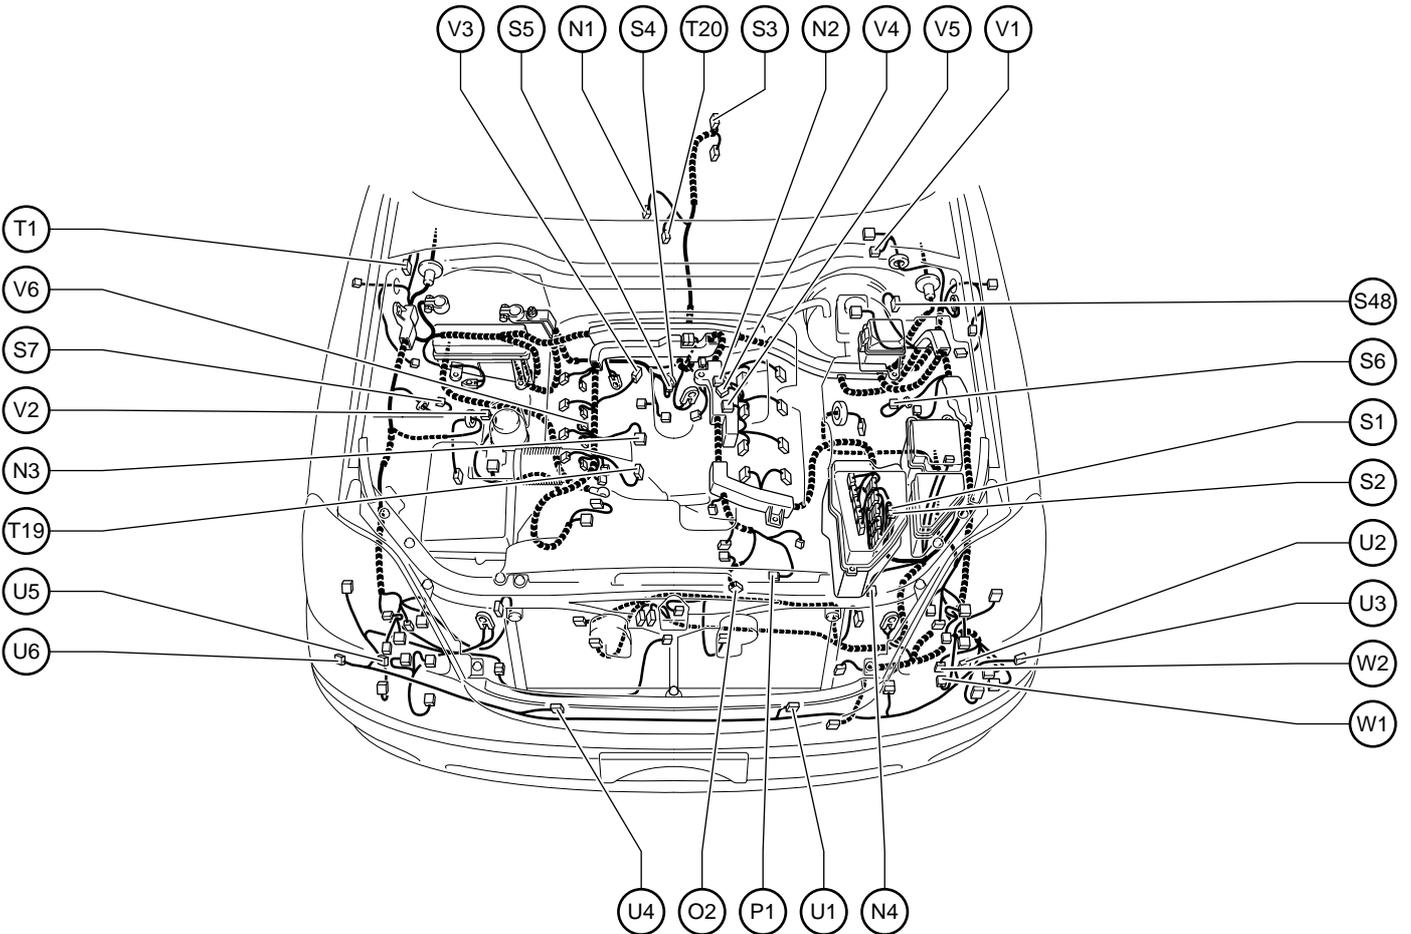

- | | | | |
|------|--|-----|--|
| N 1 | A/T Indicator Light SW
Back-Up Light SW
Neutral Start SW | U 1 | Ultrasonic Sensor (Front Left Center) |
| N 2 | Noise Filter (Ignition Left Bank) | U 2 | Ultrasonic Sensor (Front Left Side) |
| N 3 | Noise Filter (Ignition Right Bank) | U 3 | Ultrasonic Sensor (Front Left) |
| N 4 | Noise Filter (Rear Window Defogger) | U 4 | Ultrasonic Sensor (Front Right Center) |
| | | U 5 | Ultrasonic Sensor (Front Right Side) |
| | | U 6 | Ultrasonic Sensor (Front Right) |
| O 2 | Oil Pressure SW | V 1 | Variable Motor |
| P 1 | PPS Solenoid | V 2 | Variable Resistor |
| S 1 | Short Connector | V 3 | VSV (ACIS) |
| S 2 | Short Connector | V 4 | VSV (EVAP) |
| S 3 | Speed Sensor | V 5 | VVT Sensor LH |
| S 4 | Starter | V 6 | VVT Sensor RH |
| S 5 | Starter | W 1 | Washer Level Sensor |
| S 6 | Suspension Control Actuator Front LH | W 2 | Washer Motor |
| S 7 | Suspension Control Actuator Front RH | | |
| S48 | Skid Control ECU with Actuator | | |
| T 1 | Theft Deterrent Horn | | |
| T 19 | Throttle Control Motor
Throttle Position Sensor | | |
| T 20 | Turbine Speed Sensor | | |