


Position of Parts in Body

[LHD]

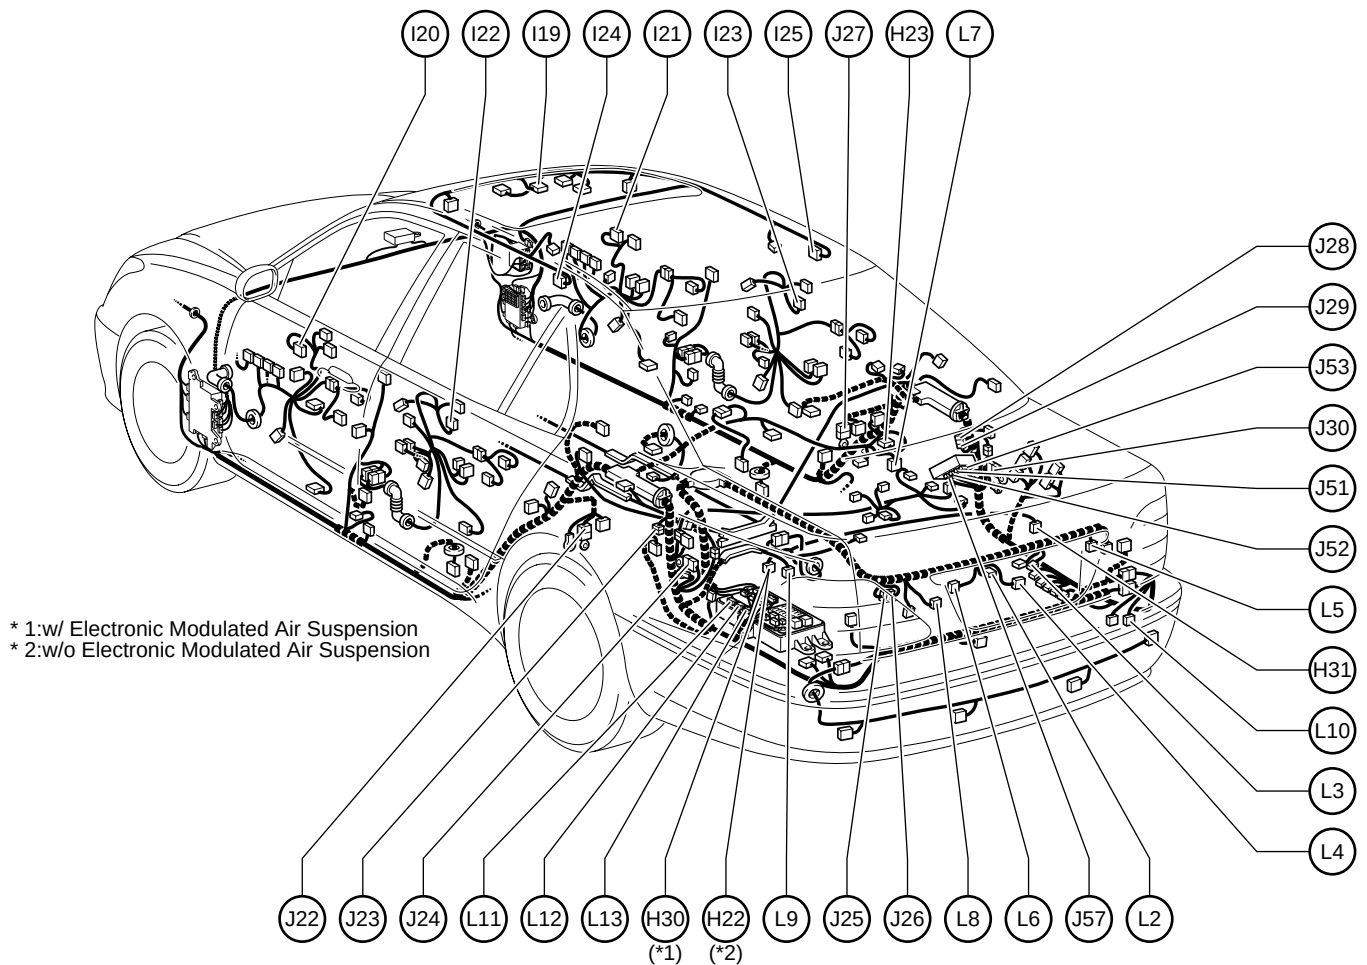

H22 Height Control Sensor Rear
H23 High Mounted Stop Light
H30 Height Control Sensor Rear LH
H31 Height Control Sensor Rear RH

I 19 Door Lock Control Receiver
Inner Mirror
I 20 Inside Handle Illumination Front LH
I 21 Inside Handle Illumination Front RH
I 22 Inside Handle Illumination Rear LH
I 23 Inside Handle Illumination Rear RH
I 24 Interior Light Rear LH
I 25 Interior Light Rear RH

J 22 Junction Connector
J 23 Junction Connector
J 24 Junction Connector
J 25 Junction Connector
J 26 Junction Connector
J 27 Junction Connector
J 28 Junction Connector
J 29 Junction Connector
J 30 Junction Connector
J 51 Junction Connector
J 52 Junction Connector
J 53 Junction Connector
J 57 Junction Connector

L 2 License Plate Light LH
L 3 License Plate Light RH
L 4 Luggage Compartment Door Closer Motor
L 5 Luggage Electrical Key SW
L 6 Luggage Compartment Door Key Unlock SW
L 7 Luggage Compartment Light No.1
L 8 Luggage Compartment Light No.2
L 9 Luggage Oscillator (Inner)
L 10 Luggage Oscillator (Outer)
L 11 Luggage Room J/B ECU
L 12 Luggage Room J/B ECU
L 13 Luggage Room J/B ECU