


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[RHD]

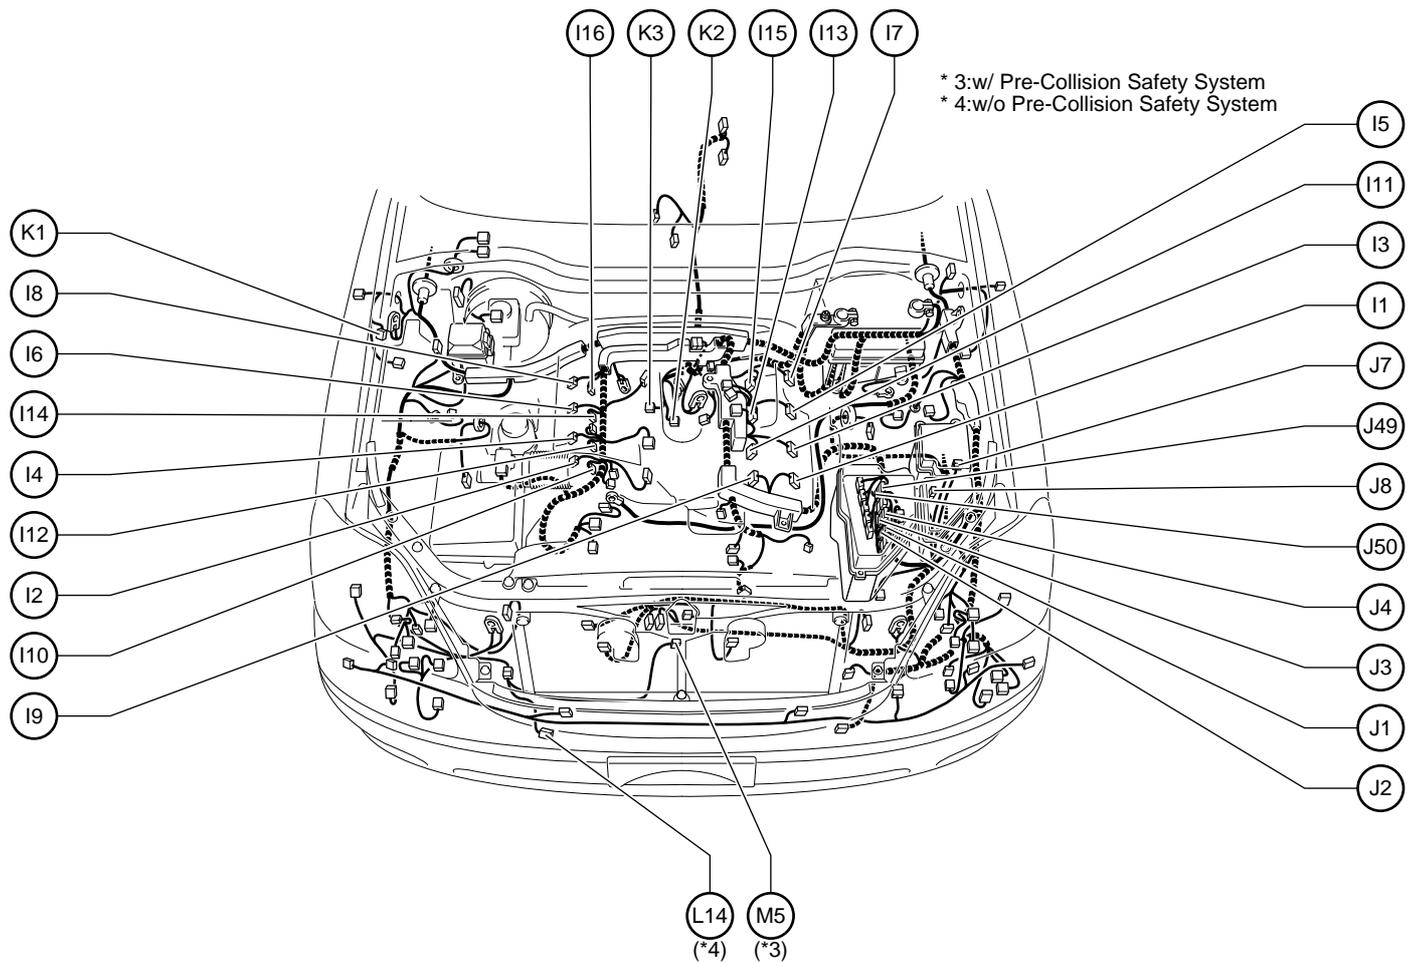

- I 1 Ignition Coil and Igniter No.1
- I 2 Ignition Coil and Igniter No.2
- I 3 Ignition Coil and Igniter No.3
- I 4 Ignition Coil and Igniter No.4
- I 5 Ignition Coil and Igniter No.5
- I 6 Ignition Coil and Igniter No.6
- I 7 Ignition Coil and Igniter No.7
- I 8 Ignition Coil and Igniter No.8
- I 9 Injector No.1
- I 10 Injector No.2
- I 11 Injector No.3
- I 12 Injector No.4
- I 13 Injector No.5
- I 14 Injector No.6
- I 15 Injector No.7
- I 16 Injector No.8

- J 1 Junction Connector
- J 2 Junction Connector
- J 3 Junction Connector
- J 4 Junction Connector
- J 7 Junction Connector
- J 8 Junction Connector
- J 49 Junction Connector
- J 50 Junction Connector
- K 1 Keyless Buzzer
- K 2 Knock Sensor (Bank 1)
- K 3 Knock Sensor (Bank 2)
- L 14 Laser Sensor
- M 5 Millimeter Wave Radar Sensor