


## Position of Parts in Instrument Panel

[RHD]

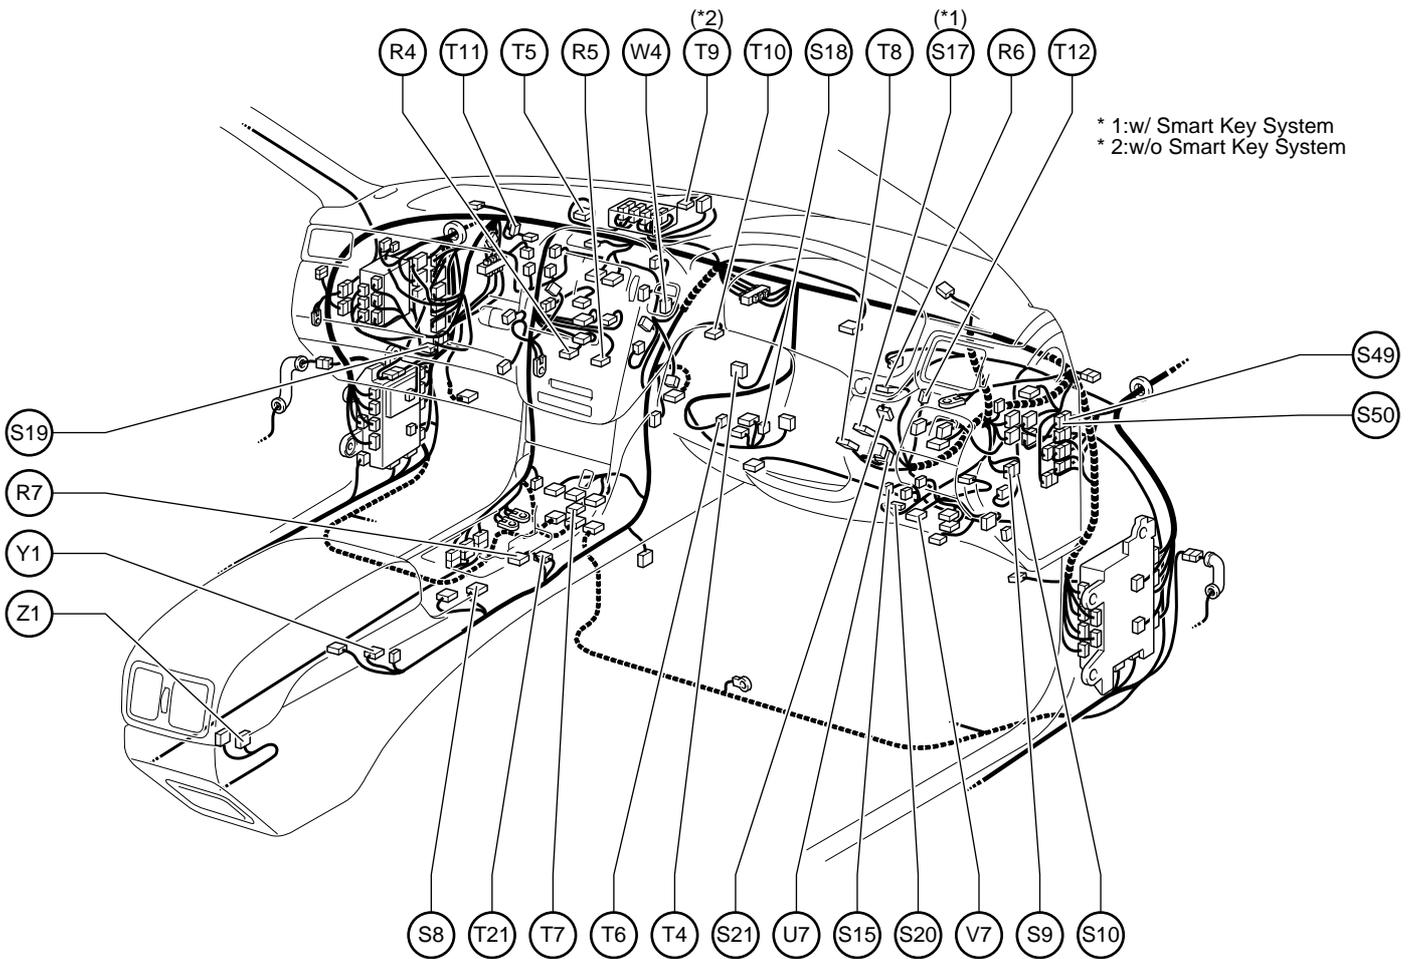

\* 1:w/ Smart Key System  
\* 2:w/o Smart Key System

R 4 Radio and Player  
R 5 Radio and Player  
R 6 Rheostat  
R 7 Room Oscillator (Front)

S 8 Shift Lock Control ECU  
S 9 Short Connector (Height Control)  
S10 Short Connector (Height Control)  
S15 Smart Key System Cancel SW  
S17 Steering Lock ECU  
S18 Steering Sensor  
S19 Step Light Front LH  
S20 Step Light Front RH  
S21 Stop Light SW  
S49 Short Connector  
S50 Short Connector

T 4 Telescopic Motor and Position Sensor  
T 5 Theft Deterrent ECU  
T 6 Tilt Motor and Position Sensor  
T 7 Climate Control Seat SW Front LH  
Climate Control Seat SW Front RH  
Headlight Cleaner SW  
Rear Seat Reset SW  
Rear Sunshade SW (Front)  
Seat Heater SW Front LH  
Seat Heater SW Front RH  
Traction Control SW  
T 8 Ignition Key Cylinder Light  
Transponder Key Amplifier  
T 9 Transponder Key Computer  
T10 Trip SW  
T11 Tweeter Front LH  
T12 Tweeter Front RH  
T21 Transmission Control SW

U 7 Unlock Warning SW

V 7 VSC Warning Buzzer

W 4 Water Valve Servo Motor

Y 1 Yaw Rate Sensor

Z 1 Option Connector (Cellular Phone)