


## Connector Joining Wire Harness and Wire Harness

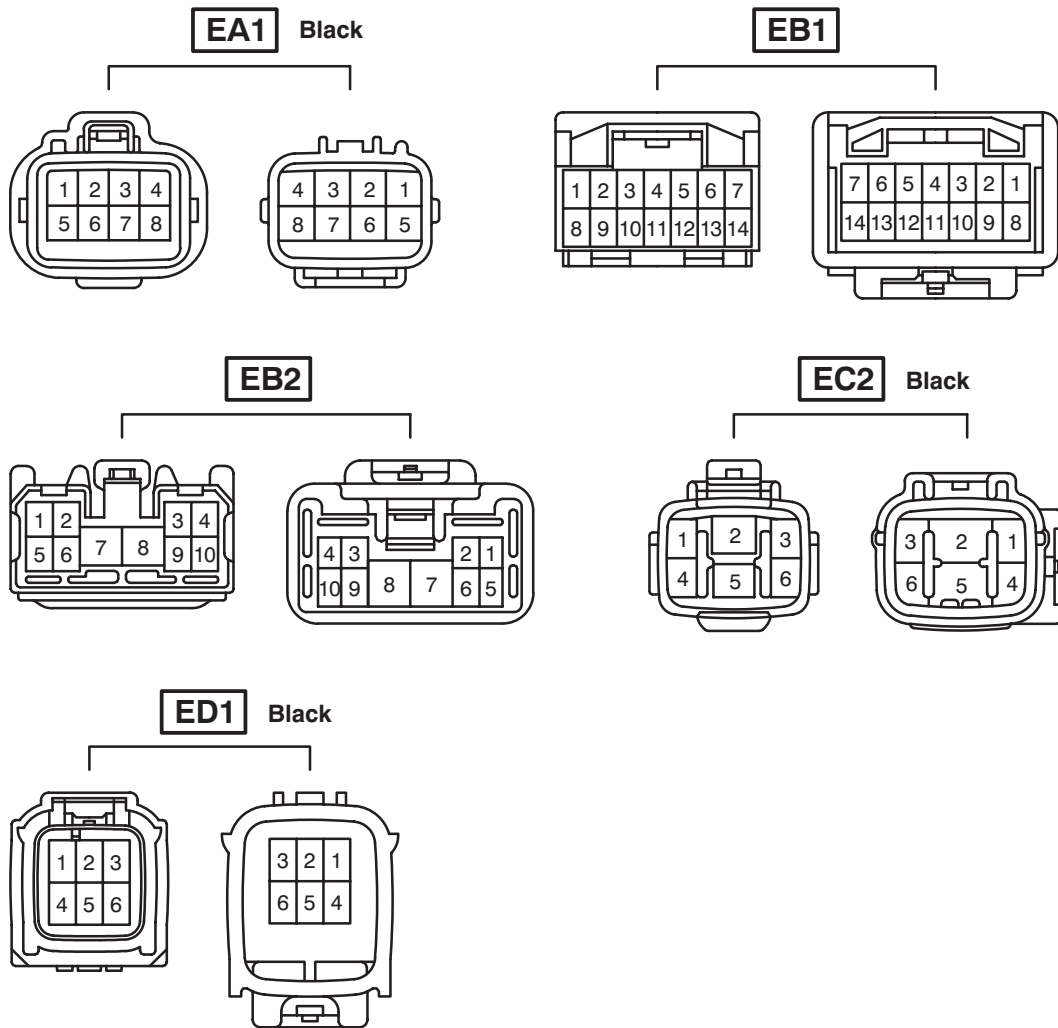

| Code | Joining Wire Harness and Wire Harness (Connector Location)                 |
|------|----------------------------------------------------------------------------|
| EA1  | Engine Room No.2 Wire and Engine Room Main Wire (Under the Headlight LH)   |
| EB1  | Engine Wire and Engine Room Main Wire (Inside of ECU Box)                  |
| EB2  | Engine No.2 Wire and Engine Wire (Behind the Intake Manifold)              |
| ED1  | Engine Room Main Wire and Engine Room No.3 Wire (Radiator Side Support RH) |