


## Connector Joining Wire Harness and Wire Harness

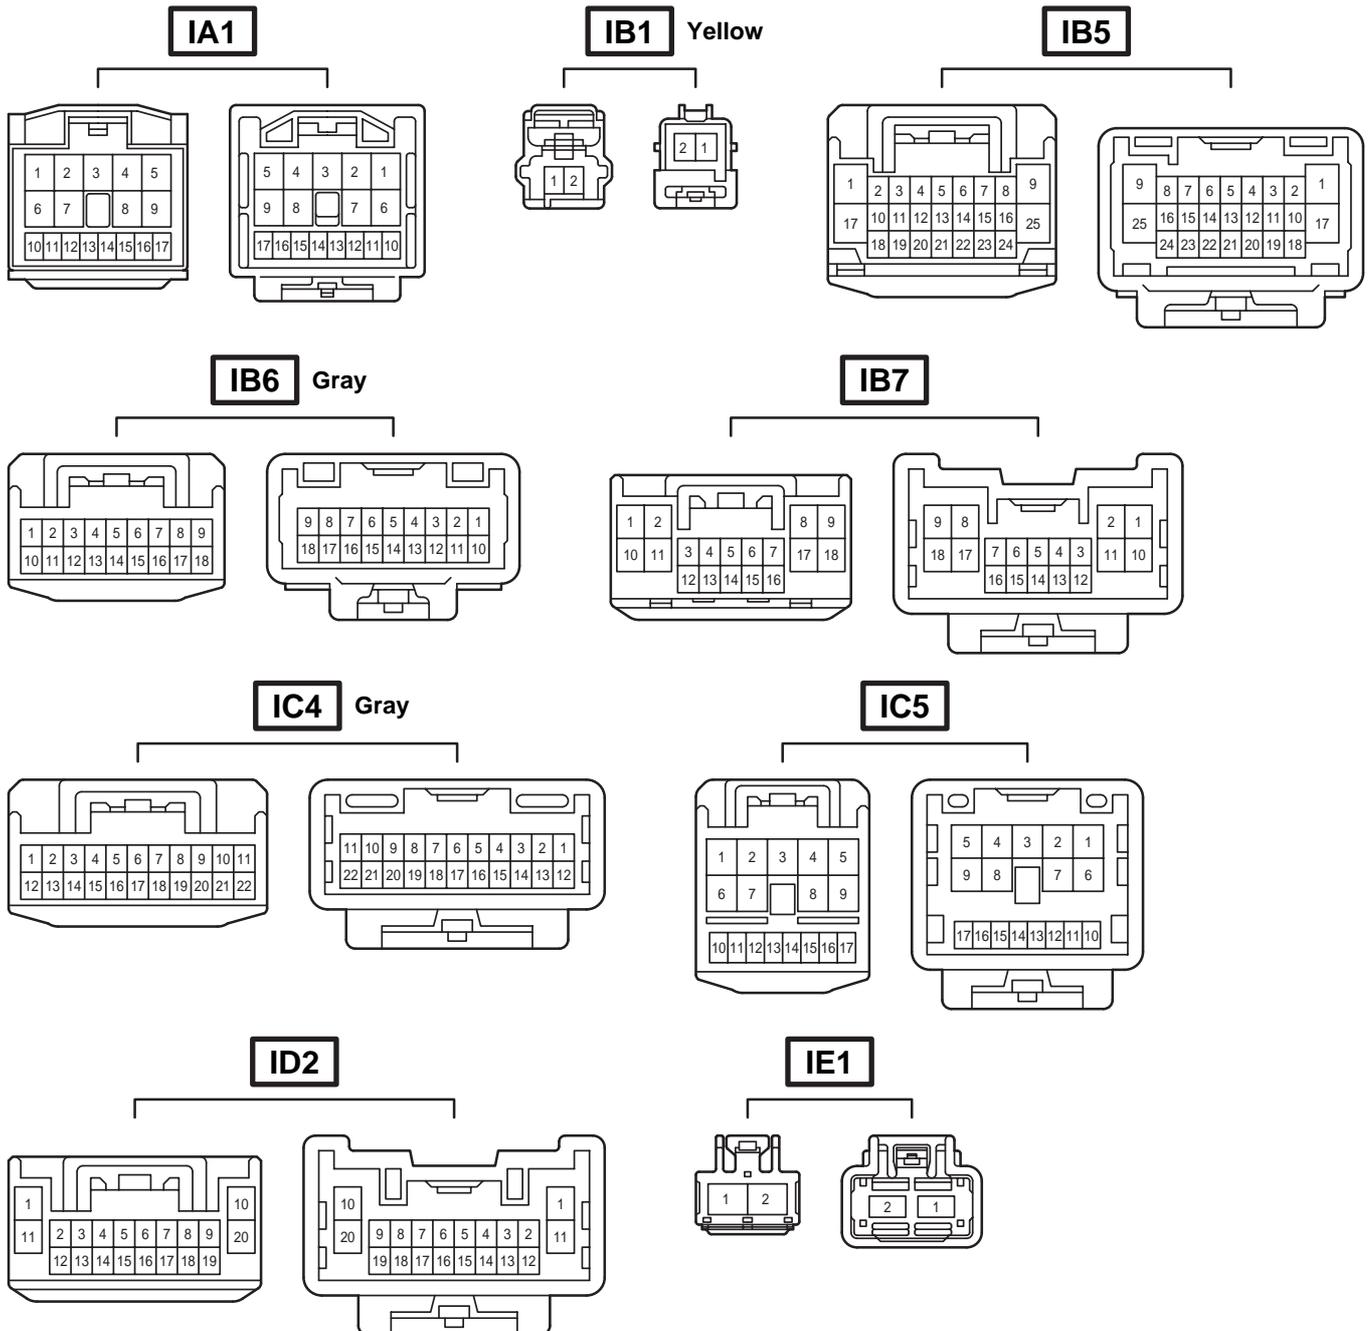

| Code | Joining Wire Harness and Wire Harness (Connector Location)           |
|------|--|
| IA1  | Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)             |
| IB1  | Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH) |
| IB5  |  |
| IB6  |  |
| IB7  |  |
| IC4  | Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)       |
| IC5  |  |
| ID2  | Engine Room Main Wire and Floor No.2 Wire (Cowl Side Panel LH)       |
| IE1  | Engine Room Main Wire and Floor No.2 Wire (Left Kick Panel)          |