


Connector Joining Wire Harness and Wire Harness

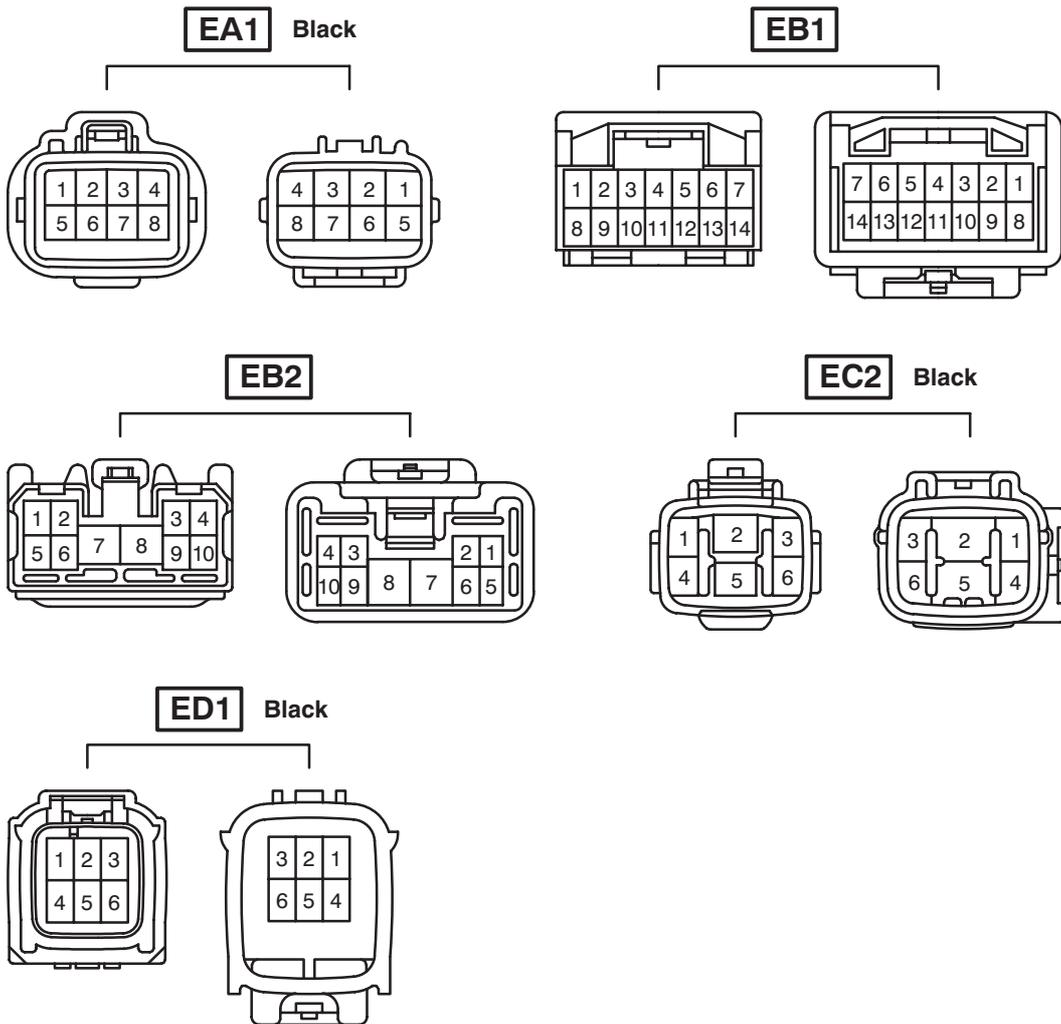

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Room No.2 Wire and Engine Room Main Wire (Under the Headlight LH)
EB1	Engine Wire and Engine Room Main Wire (Inside of ECU Box)
EB2	Engine No.2 Wire and Engine Wire (Behind the Intake Manifold)
ED1	Engine Room Main Wire and Engine Room No.3 Wire (Radiator Side Support RH)