


## Connector Joining Wire Harness and Wire Harness

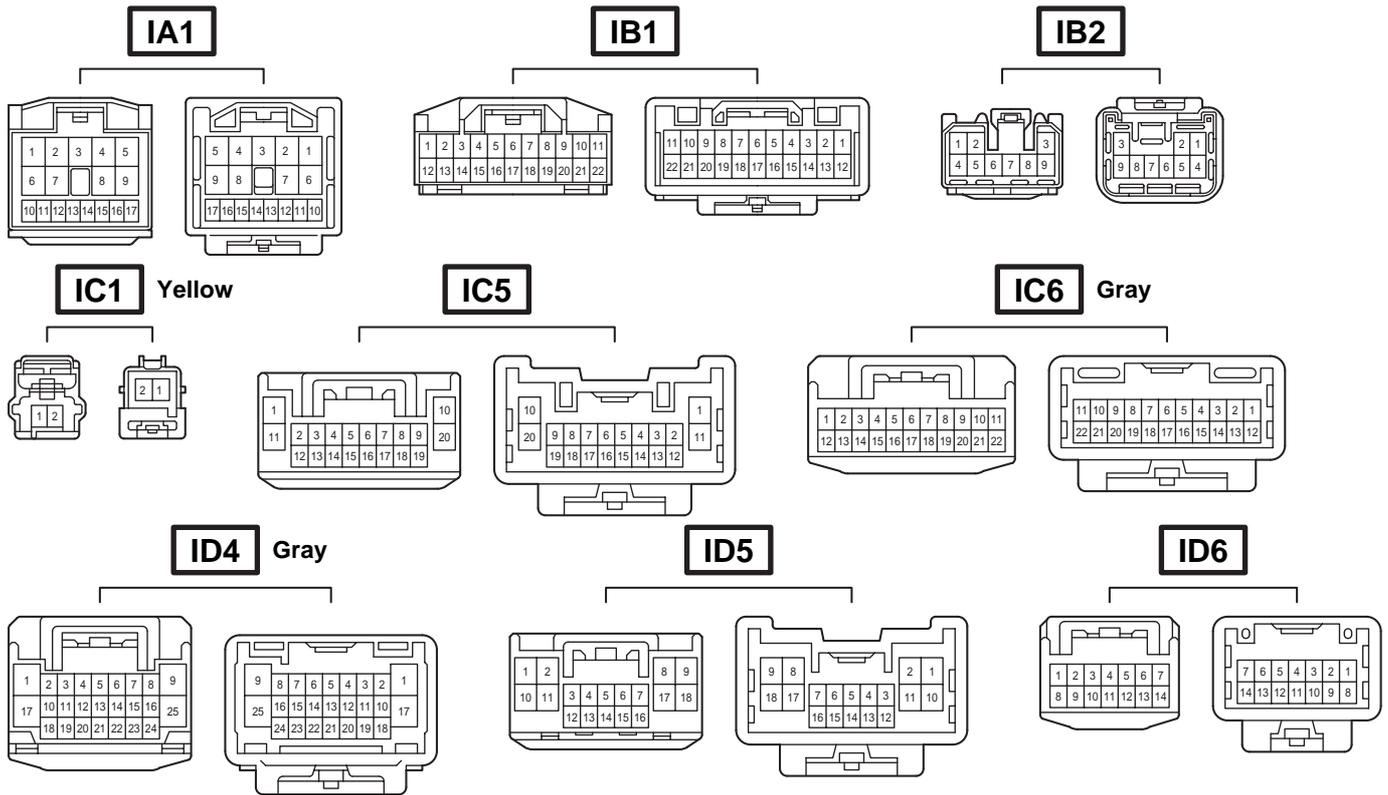

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Front Door LH Wire and Floor No.2 Wire (Left Kick Panel)
IB1	Instrument Panel Wire and Roof Wire (Cowl Side Panel LH)
IB2	
IC1	
IC5	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel LH)
IC6	
ID4	
ID5	Instrument Panel Wire and Floor No.2 Wire (Cowl Side Panel LH)
ID6	