


Connector Joining Wire Harness and Wire Harness

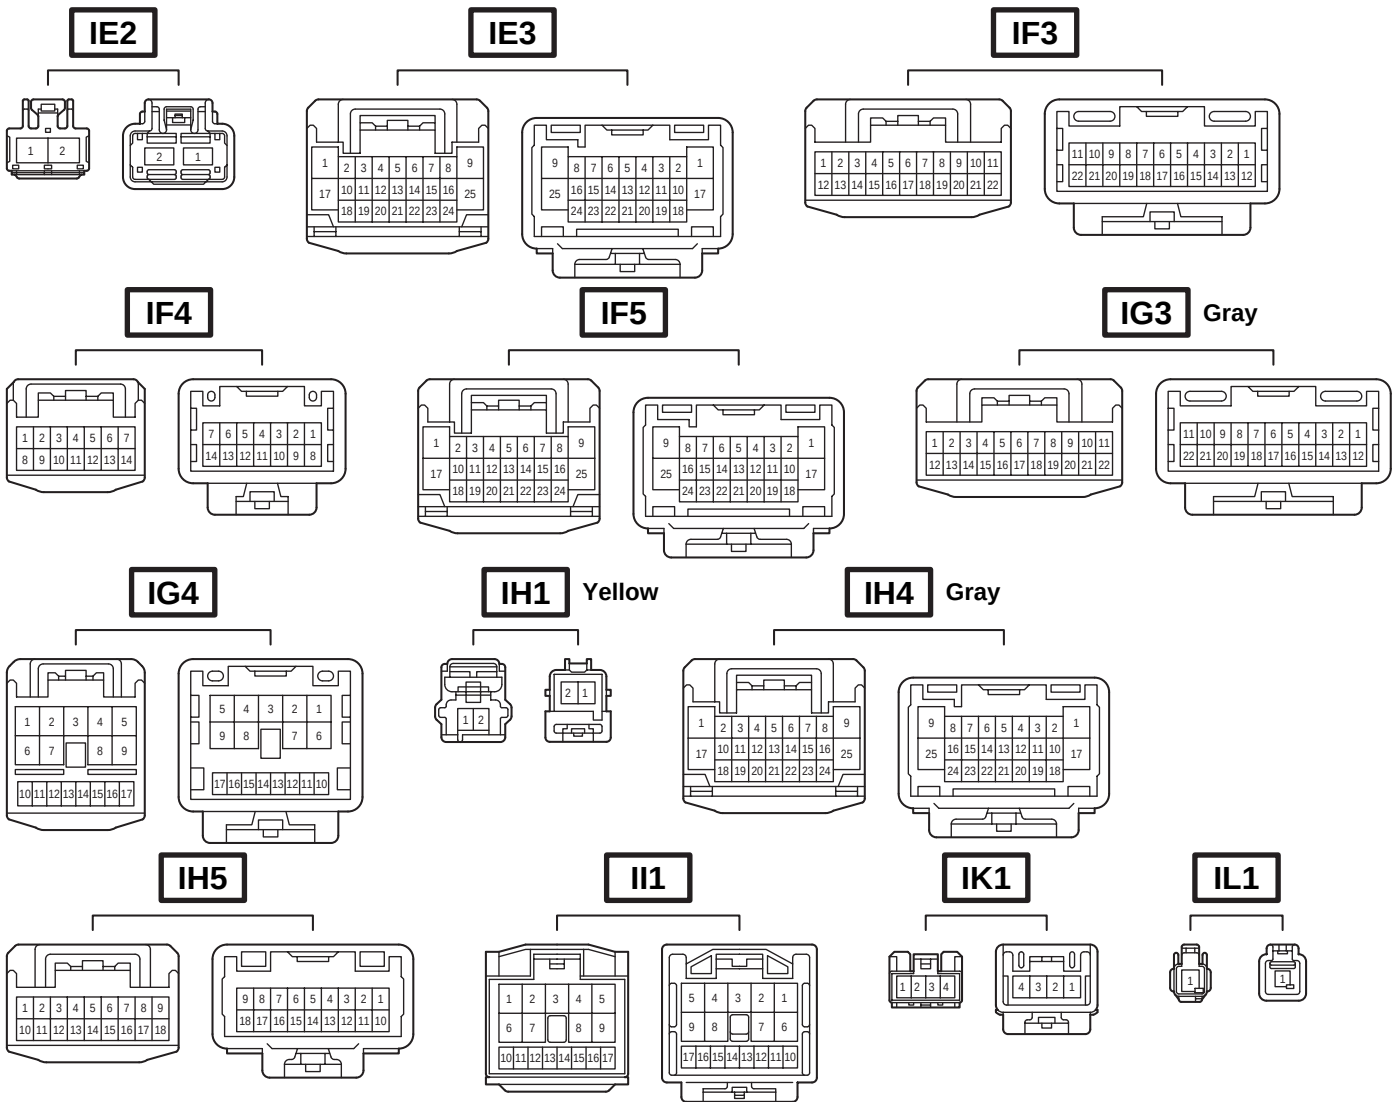

Code	Joining Wire Harness and Wire Harness (Connector Location)
IE2	Engine Room Main Wire and Floor No.2 Wire (Left Kick Panel)
IE3	
IF3	Instrument Panel Wire and Floor Wire (Left Side of Shift Lever)
IF4	
IF5	Instrument Panel Wire and Floor Wire (Cowl Side Panel RH)
IG3	
IG4	Instrument Panel Wire and Engine Room Main Wire (Cowl Side Panel RH)
IH1	
IH4	Front Door RH Wire and Floor Wire (Right Kick Panel)
IH5	
II1	Instrument Panel Wire and Switch Wire (Center of Instrument Panel)
IK1	
IL1	Instrument Panel Wire and A/C Sub Wire (Left Side of A/C Unit)