

■ **OUTSIDE REAR VIEW MIRROR**

The outside rear view mirror has following functions:

: Added

Function	Outline
Electrical Remote Control type Mirror	When the mirror control switch is operated, this function moves the mirror surface vertically or laterally to enable the driver to attain an optimal mirror angle. Setting the mirror master switch to the "R" position operates the right mirror, and to the "L" position operates the left mirror.
Rear Window Defogger-linked Mirror Heater	This function also automatically turns ON the mirror heater when the rear window defogger switch is turned ON. After 15 minutes have elapsed from the time this function has been activated, the rear window defogger turns OFF automatically, and the mirror heater also turns OFF.
Automatic Glare-resistant EC Mirror	This function prevents the glare of the headlights of the vehicle being driven behind that are reflected on the mirror from blinding the driver during nighttime driving. It works in unison with the inner mirror to reduce the amount of reflection.
Memory Function	This function stores two mirror adjustment positions in the memory mirror ECU. Thus, the mirrors can be adjusted to the positions that are stored in the memory mirror ECU by pressing the memory switch for driver. This function operates by linking with the driver seat position memorized in the power seat switch with memory seat ECU.
Reverse Shift-linked Mirror	This function directs the mirror surface downward to improve the visibility when driving in reverse, provided that all the conditions given below have been met. <ul style="list-style-type: none"> <li>● Ignition switch is ON.</li> <li>● Shift lever is moved from a position other than "R" to "R".</li> <li>● Mirror control switch is in "R" or "L" position.</li> </ul> The operation range is shown below. <ul style="list-style-type: none"> <li>● Driver side: Max. 5° downward</li> <li>● Front passenger side: Max. 6° downward</li> </ul>

4

► **System Diagram** ◀

